


キーボード別キー入力一覧

USA配列 (N8143-84F/-86)

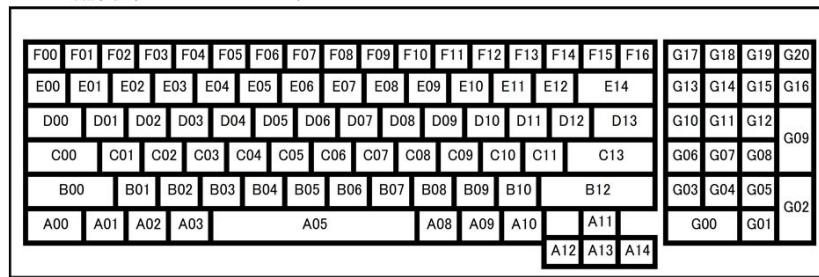

キー番号	N8143-84F 17-inch LCD Console Unit N8143-86 キーボードユニット (US)	
	半角	SHIFT+ 半角
E00	`	~
E01	1	!
E02	2	@
E03	3	#
E04	4	\$
E05	5	%
E06	6	^
E07	7	&
E08	8	*
E09	9	(
E10	0)
E11	-	_
E12	=	+
E14	Back Space	
D00	Tab	Tab
D01	q	Q
D02	w	W
D03	e	E
D04	r	R
D05	t	T
D06	y	Y
D07	u	U
D08	i	I
D09	o	O
D10	p	P
D11	[{
D12]	}
D13	\	
C00	CapsLock	CapsLock
C01	a	A
C02	s	S
C03	d	D
C04	f	F
C05	g	G
C06	h	H
C07	j	J
C08	k	K
C09	l	L
C10	;	:
C11	'	"
C13	Enter	SHIFT+ Enter

キー番号	N8143-84F 17-inch LCD Console Unit N8143-86 キーボードユニット (US)	
	半角	SHIFT+ 半角
B00	L-Shift	
B01	z	Z
B02	x	X
B03	c	C
B04	v	V
B05	b	B
B06	n	N
B07	m	M
B08	,	<
B09	.	>
B10	/	?
B12	R-Shift	R-Shift
A00	L-Ctrl	SHIFT+ L-Ctrl
A01	FN	FN
A02	L-Windows	L-Windows
A03	L-Alt	Shift+ L-Alt
A05	Space	Space
A08	R-Alt	Shift+ R-Alt
A09	Appli	Appli
A10	R-Ctrl	R-Ctrl
A11	↑	Shift+ ↑
A12	←	Shift+ ←
A13	↓	Shift+ ↓
A14	→	Shift+ →
F00	ESC	ESC
F01	F1	F1
F02	F2	F2
F03	F3	F3
F04	F4	F4
F05	F5	F5
F06	F6	F6
F07	F7	F7
F08	F8	F8
F09	F9	F9
F10	F10	F10
F11	F11	F11
F12	F12	F12

キー番号	N8143-84F 17-inch LCD Console Unit N8143-86 キーボードユニット (US)		
	半角	SHIFT+ 半角	FN+ 半角
F13	ScrLk	ScrLk	
F14	Insert	Shift+ Insert	PrtSc
F15	Delete	Shift+ Delete	SysRq
F16	Pause	Pause	Break (+CTRL)

キー番号	N8143-84F 17-inch LCD Console Unit N8143-86 キーボードユニット (US)		
	半角	SHIFT+ 半角	テンキーモード (NumLock)
G00	Insert	Shift+ Insert	0 (ten)
G01	Delete	Shift+ Delete	. (ten)
G02	Enter	SHIFT+ Enter	Enter (ten)
G03	End	Shift+ End	1 (ten)
G04	↓	Shift+ ↓	2 (ten)
G05	PgDn	Shift+ PgDn	3 (ten)
G07			5 (ten)
G08	→	Shift+ →	6 (ten)
G09	+	+	+ (ten)
G10	Home	Shift+ Home	7 (ten)
G11	↑	Shift+ ↑	8 (ten)
G12	Pg Up	Shift+ Pg Up	9 (ten)
G13	NumLk	NumLk	NumLk
G14	/	/	/ (ten)
G15	*	*	* (ten)
G16	-	-	- (ten)
G17	Home	Shift+ Home	
G18	End	Shift+ End	
G19	Pg Up	Shift+ Pg Up	
G20	PgDn	Shift+ PgDn	