

大切に保管してください

# N8116-28

## フルレングスPCIサポートキット

### 取り扱いの手引き

この度は、本製品をお買い上げいただきまして誠にありがとうございます。

本製品を取り扱う前に本書の内容をよく読み、指示に従ってください。また、本製品を取り付ける前に、取り付ける本体に添付の「ユーザズガイド」に記載されている注意事項も参照してください。  
また、増設にあたっては、最寄りの保守サービスセンターに依頼することをお勧めします。



安全上のご注意を無視する取り扱いを行うと、装置の故障、人体事故、火災・周囲の機器の損傷を引き起こす原因となることがあります。

オプションの取り付け、取り外し時は電源プラグをコンセントから抜き、外部装置と接続しているケーブルを外してください。  
故障や感電する恐れがあります。



電源プラグを抜く



感電注意

本書に記載されている場合を除き、絶対に分解したり、修理・改造を行ったりしないでください。装置が正常に動作しなくなるばかりでなく、感電や火災の危険があります。



分解禁止



発火注意



感電注意

## 構成品

項番	品名	数量	備考
1	ヒートシンク	1	
2	PCIカードレール	1	
3	保証書	1	
4	フルレングスPCIサポートキット 取り扱いの手引き	1	本書

## 取り扱い上の注意事項

本製品を箱から取り出した後は、次の注意事項を必ずお守りください。

- ほこりの多い場所や水などの液体のかかるおそれのある場所に置かないでください。
- 強い磁気を発生させるものの近くに置かないでください。

## 第三者への譲渡

本製品を第三者へ譲渡（または売却）する場合には、本書を一緒にお渡しくください。

## フルレングスPCIサポートキットの取り付け


### 1. 準備確認事項

- (1)本キットを本体装置へ組み込む場合には危険防止及び故障防止のため、本体装置の電源スイッチをOFFにし、電源プラグをコンセントから抜いてください。


### 2. 取り付け手順

#### (1) ヒートシンクの取り付け

1. CPU2 側に搭載されているヒートシンクを外す。

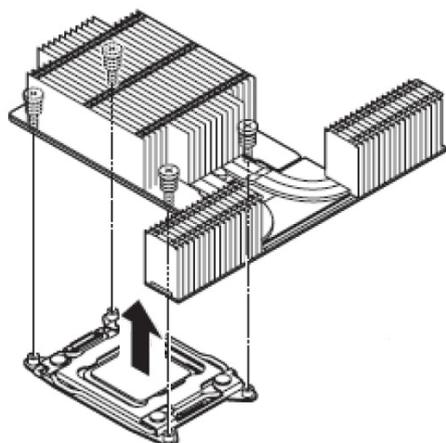


2. 本 Kit のヒートシンクを搭載する。

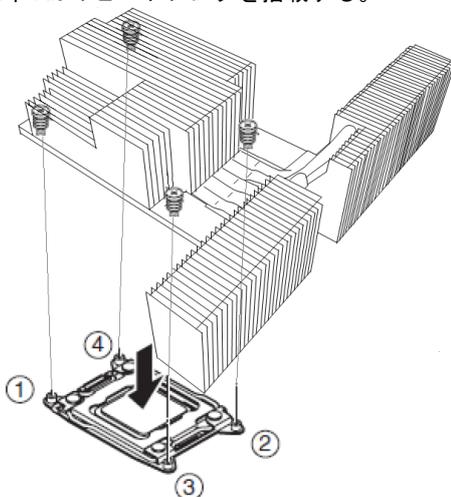

番号順に仮止めしてから水平にしっかりと固定してください。

## (2)PCIカードレールの取り付け

1. PCIカードレールをライザカードブラケットに取り付ける。

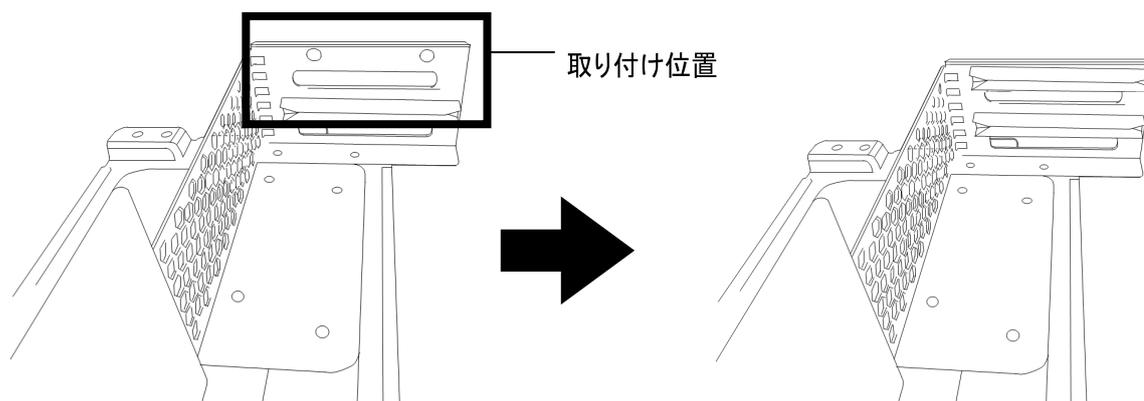

- PCIカードの端子部分には触れないでください。汚れや油が付いた状態で取り付けると誤動作の原因になります。

**NEC**

N8116-28 フルレングス PCI サポートキット  
取り扱いの手引き



\*855-910997-028-00 \*

Keep this manual carefully along with the product

# N8116-28

## Full Length PCI Card installation Kit

### USER' S GUIDE

Congratulations for your purchase of this Full Length PCI Card installation Kit.

The User's Guide is intended to allow you to install and use the Full Length PCI Card installation Kit. N8116-28 correctly and safely. Read this manual thoroughly before handling the Kit. In addition, refer to this guide whenever you want to know how to use the Kit or some malfunction occurs. Always keep this guide at hand so that you can see it when necessary.

For the server in which the Kit is installed, refer to the User's Guide of the server. Read "Notes on Use" carefully before handling the Kit.

 <b>WARNING</b>	
Indicates the presence of a hazard that may result in death or serious personal injury.	
<p>When you install the option or delete it, unplug the power cord and extract the cable that has connected to another one. Otherwise, an electric shock or fire may be caused.</p>	<div style="display: flex; align-items: center; margin-bottom: 10px;">  <div style="margin-left: 10px;">Unplug the power cord!</div> </div> <div style="display: flex; align-items: center;">  <div style="margin-left: 10px;">Precaution against electric shock</div> </div>
<p>Do not disassemble, repair, or modify the server. Otherwise, an electric shock or fire may be caused.</p>	<div style="display: flex; align-items: center; margin-bottom: 10px;">  <div style="margin-left: 10px;">Prohibition of disassembly</div> </div> <div style="display: flex; align-items: center; margin-bottom: 10px;">  <div style="margin-left: 10px;">Indicates that improper use may cause fire.</div> </div> <div style="display: flex; align-items: center;">  <div style="margin-left: 10px;">Precaution against electric shock</div> </div>

**Composition article**

No.	Name	Number	Comment
1	Heat Sink	1	
2	PCI Card Rail	1	
3	Full Length PCI Card installation Kit User's Guide	1	This book.

**Notes On Use**

Please be sure to protect the following notes after picking out this product from a box.

- Do not use the server in the place where dust, water or liquid may pour.
- Do not use the server in the place where the strong electromagnetic waves generate

**Transfer to Third Party**

Make sure to provide this manual and all the accessories along with the product to a third party.


## Installing N8116-28 in Server

### 1. Preparation point to be checked


- (1) Exit from the application programs and shutdown the system.
- (2) Turn off the power of the server and disconnect all the power cords from the receptacles.

### 2. Install procedure

- (1) Installing the Heat Sink.
  1. Remove the Heat Sink installed in CPU2.

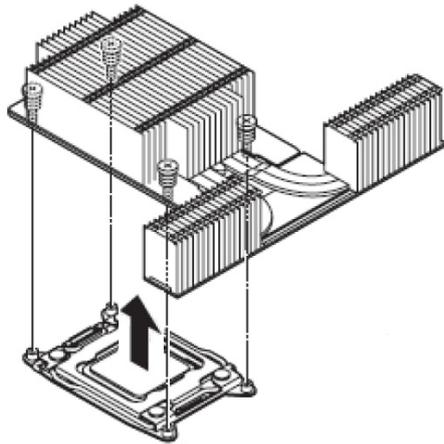


2. Install the Heat Sink of this Kit to CPU2.

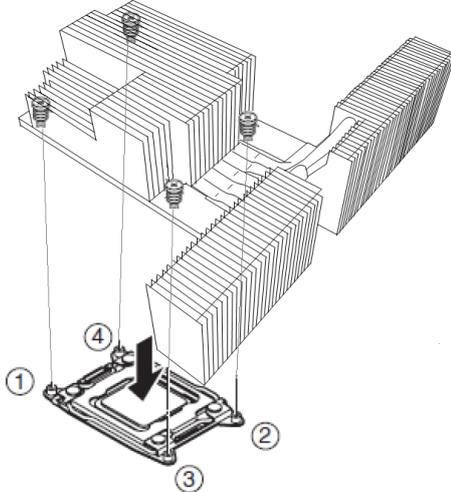

(3) Install the PCI Card Rail

2. Install the PCI Card Rail to the riser bracket.

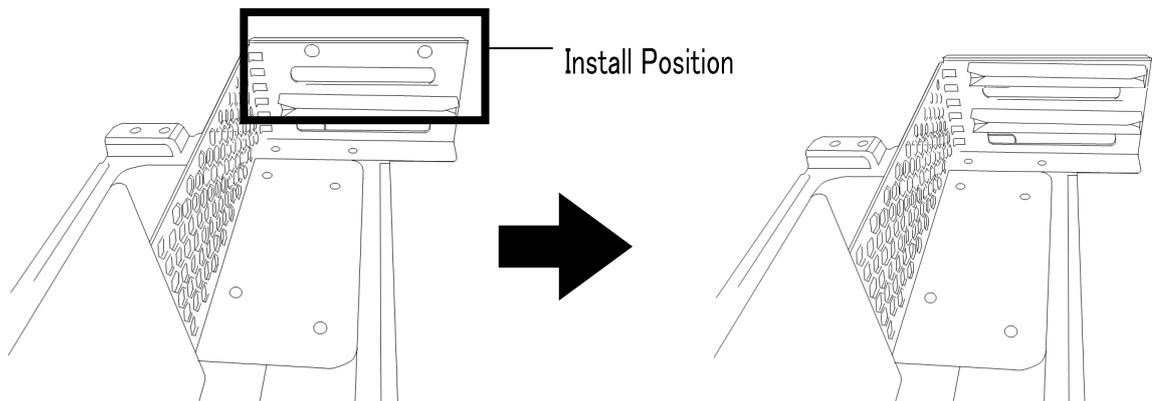

**IMPORTANT**

- Do not touch the terminals of the PCI CARD with your bare hand. Fingerprints and dust left on them cause the server to malfunction.

---

**NEC**

N8116-28

Full Length PCI Card installation Kit  
USERS GUIDE



\*855-910997-028-00 \*