

N8146-41 目詰まり検出センサ

ユーザズガイド

はじめに

このたびは、本製品をお買い求めいただき、まことにありがとうございます。
本書は、本製品を正しく安全に設置・使用するための手引きです。本製品をご使用になる前に本書をよくお読みになり、製品の取り扱いを十分にご理解ください。
また、本製品を本体装置に取り付ける際には、装置に添付のユーザズガイド等に記載されている注意事項も必ず読み、ご理解・ご確認の上、作業を行ってください。ユーザズガイドは本体装置に添付のEXPRESSBUILDER DVD-ROMに格納されています。

本書は必要なときすぐに参照できるよう、お手元に置いておくようにしてください。
ご使用の前に「使用上のご注意」を必ずお読みください。



使用上のご注意 - 必ずお読みください -

本製品を安全に正しくご使用になるために必要な情報が記載されています。





安全にかかわる表示について

本書では、本製品を安全に正しくお使いいただき、お客様への危害や財産への損害を未然に防止するために、次の絵表示を使用しています。内容をよく理解されてから、本文をお読みください。



本書では、危険の程度を表す用語として、「警告」と「注意」を使用しています。それぞれの用語は次のような意味を持つものとして定義されています。

	警告	人が死亡する、または重傷を負うおそれがあることを示しています。
	注意	火傷や怪我または物的損害を負うおそれがあることを示しています。


危険に対する注意・表示は次の2種類の記号を使用しています。それぞれの記号は次のような意味を持つものとして定義されています。

	注意の喚起	この記号は危険が発生するおそれがあることを表しています。記号の中の絵表示は危険の内容を図案化したものです。	(例)  (高温注意)
	行為の禁止	この記号は行為の禁止を表しています。記号の中や近くの絵表示は禁止された行為の内容を図案化したものです。	(例)  (分解禁止)


注意の喚起

	特定しない一般的な注意・警告を示します。		発煙や発火のおそれがあることを示します。
---	----------------------	---	----------------------

行為の禁止

	特定しない一般的な禁止を示します。
---	-------------------

行為の強制

	本体装置の電源プラグをコンセントから抜いてください。火災や感電のおそれがあります。
---	---



856-180193-041-00

安全上のご注意

安全にお使いいただくために、次に示す注意事項をお守りください。

警告



万一、煙、異臭、異音などが生じた場合は、ただちに電源をOFFにして電源プラグをコンセントから抜いてください。その後、お買い求めの販売店または保守サービス会社にご連絡ください。そのまま使用すると火災の原因となります。

注意

注意事項を無視して本製品を取り扱くと、本体装置の故障、人体事故、火災、周辺機器の損傷を引き起こす原因となることがあります。



本製品を本体装置へ取り付け、取り外しの際は必ず電源プラグをコンセントから抜き、外部装置と接続しているケーブルを外してください。故障や感電する恐れがあります。



本体装置内部に手をいれるときには、指をはさんだり、ぶついたりしないように注意してください。



本製品の取り付け、取り外しを行う前に、身近な金属（アルミサッシやドアのノブなど）に手を触れて、身体の静電気を取り除くようにしてください。



指定した装置以外に取り付けしないでください。指定以外の装置にたとえ取り付けることができて、取り付けした装置の冷却機能が低下して正常に動作しないばかりか、火災や故障の原因となるおそれがあります。



次に示すような場所や本書で指定している環境条件を超える場所には設置・保管しないでください。火災や故障の原因となるおそれがあります。

- 薬品や化学物質などを扱う場所
- 直射日光が当たる場所
- 湿気の多い場所
- 不安定な場所
- 急激な温度変化のある場所
- 振動や衝撃のある場所
- 腐食性ガス(二酸化硫黄、硫化水素、二酸化窒素、塩素、アンモニア、オゾンなど)の存在する環境
- 腐食を促進する成分(塩化ナトリウムや硫黄など)や導電性の金属などが含まれている環境

取り扱い上のご注意 - 本製品を正しく動作させるために -

本製品を正しく動作させるために次に示す注意事項をお守りください。これらの注意を無視した取り扱いをすると故障の原因になります。

- 保管や取り付け・取り外しの際に固いものにぶつけないでください。
- 梱包状態でも落下させないでください。損傷するおそれがあります。

< 本書の記号について >

本書の中には次の記号を使用しています。記号は次のような意味をもつものとして定義されています。



重要

取り扱いで、守らなければいけないことや特に注意すべき点を示します。

第三者への譲渡について

本製品を第三者に譲渡(または売却)するときは、必ず本書を含め全ての添付品を一緒にお渡しください。

廃棄について

本製品の廃棄については各自治体の廃棄ルールに従ってください。詳しくは、各自治体へお問い合わせください。防塵フィルタはプラスチックとして廃棄してください。

1. 本製品使用上のご注意






重要

- 本製品は Express5800/GT110f-S、Express5800/T110f-S、iStorage NS100Td専用オプションです。
N8146-39 スリムタワー用防塵ベゼル、またはN8146-40 スリムタワー用防塵ベゼル(センサ付)と組み合わせて使用します。

2. 構成品

構成品を確認してください。

項番	品名	数量	概要
1	目詰まり検出センサ	2	
2	センサ接続用ケーブル	1	
3	目詰まり検出ソフトウェア (CD-ROM)	1	
4	ユーザーズガイド	1	本書

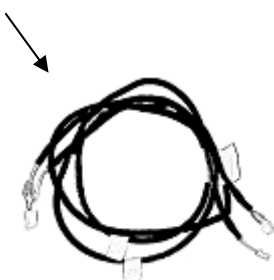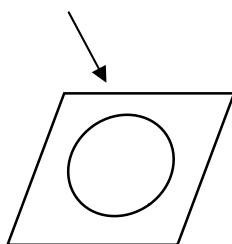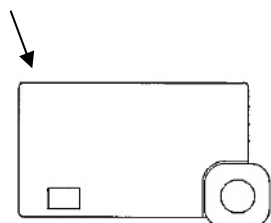


3. 装置への取り付け

以下の手順に従い、装置への取り付けを行ってください。



- 取り付けを行う製品の説明書を参照し、「安全上のご注意」、「取り扱い上のご注意」を守って取り付け・取り外しを行ってください。


1. N8146-39/40 スリムタワー用防塵ベゼルのユーザーズガイドを参照して、装置から防塵ベゼルを取り外してください。
2. 下図を参照してセンサ取り付けスロットに目詰まり検出センサを取り付けてください。

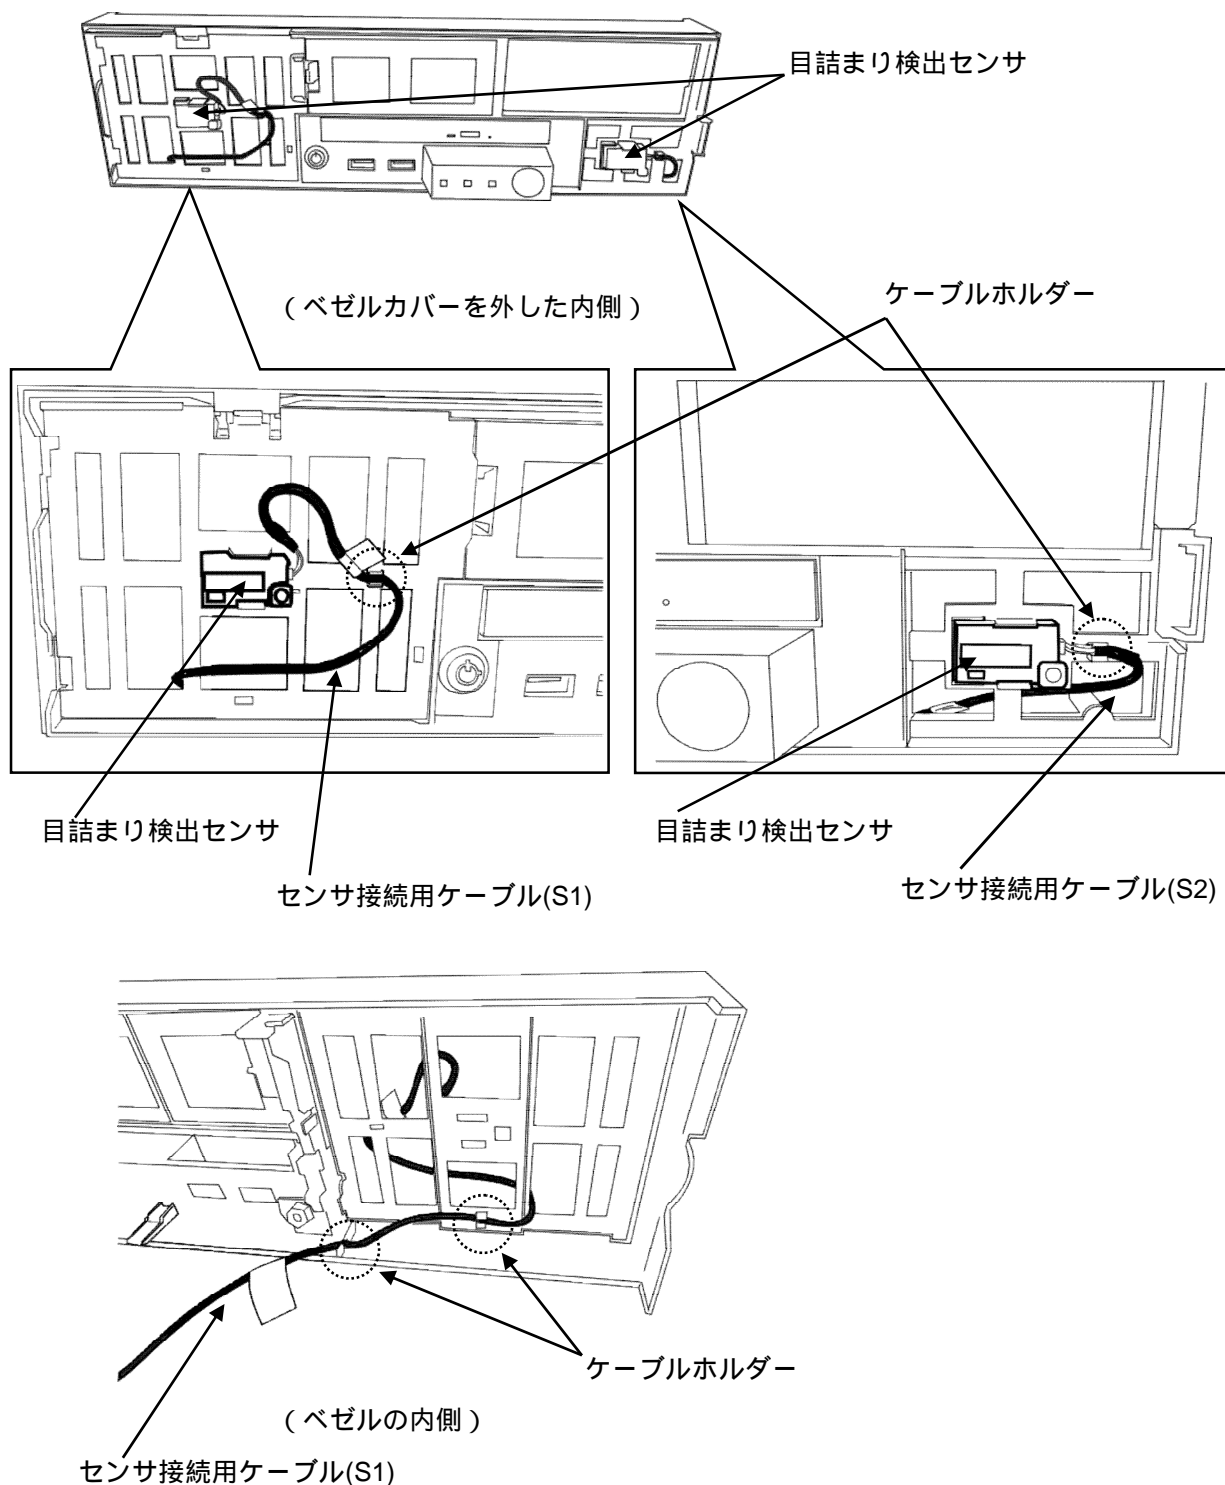




- 目詰まり検出センサには、表裏、取り付け向きがあります。誤った取り付け方をすると、正しく機能しませんので正しい向きで取り付けてください。
取り付け後は、目詰まり検出センサがセンサ取り付けスロットに収まり、しっかり固定されていることを確認してください。


- 装置前面のフロントUSBポートと光ディスクドライブの間の隙間から、センサ接続用ケーブルを装置内へ引き込みます。

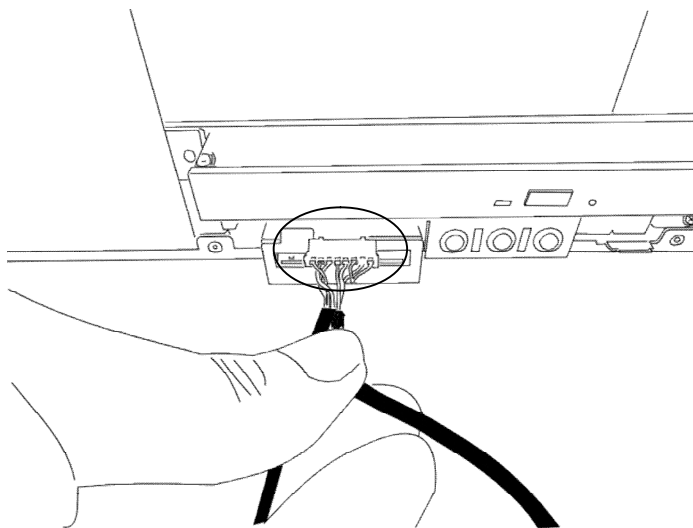


- センサ接続用ケーブルは、下図を参照してフロントUSBポートの左側(S1)とLEDの右側(S2)をそれぞれ通る位置に通します。

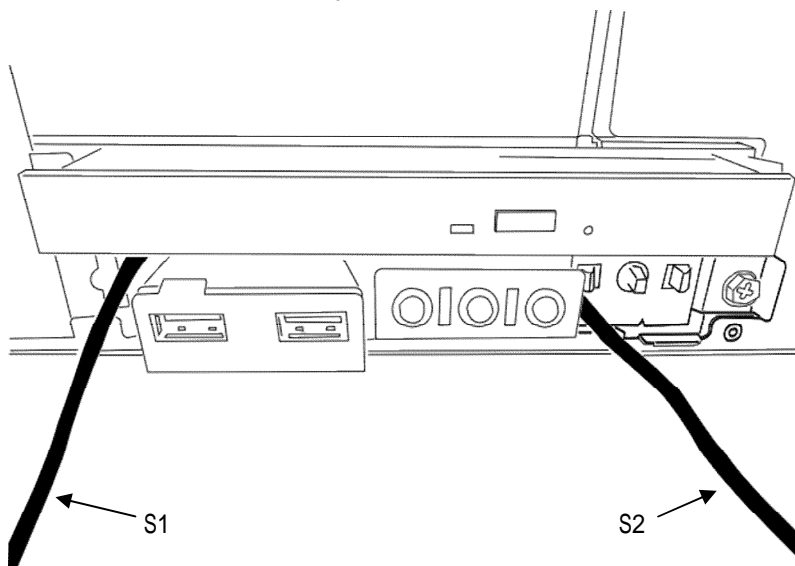


5. 下図の様に目詰まりセンサ接続用ケーブルのコネクタをマザーボードのコネクタに接続します。下図に示す矢印の向きに合わせて目詰まりセンサのコネクタをマザーボード上のコネクタに接続してください。

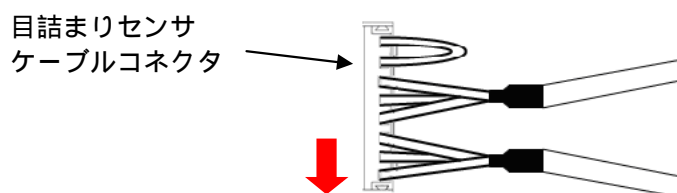


< 空冷冷却方式モデル >

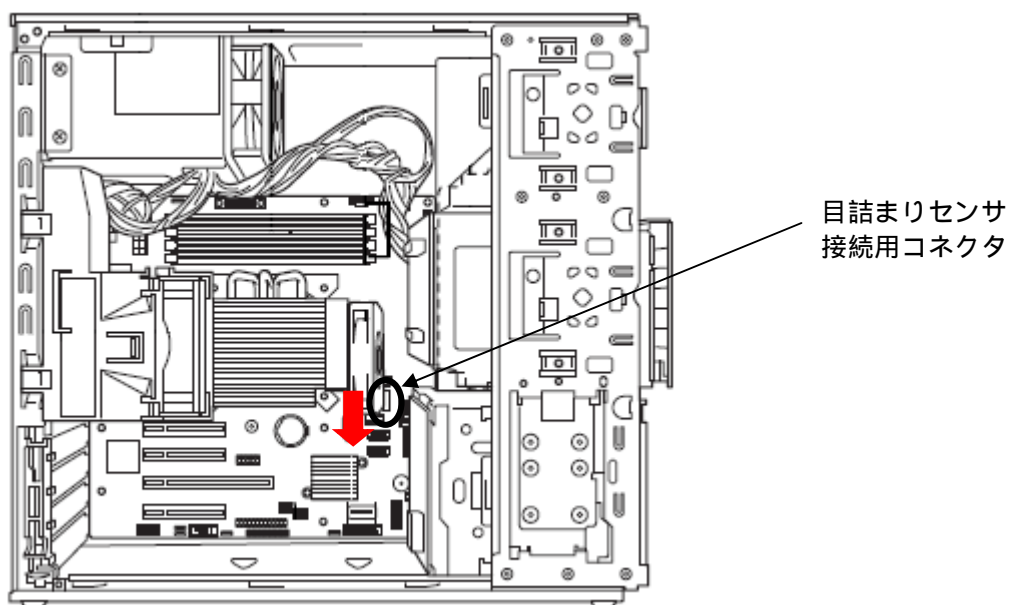

< 水冷冷却方式モデル >

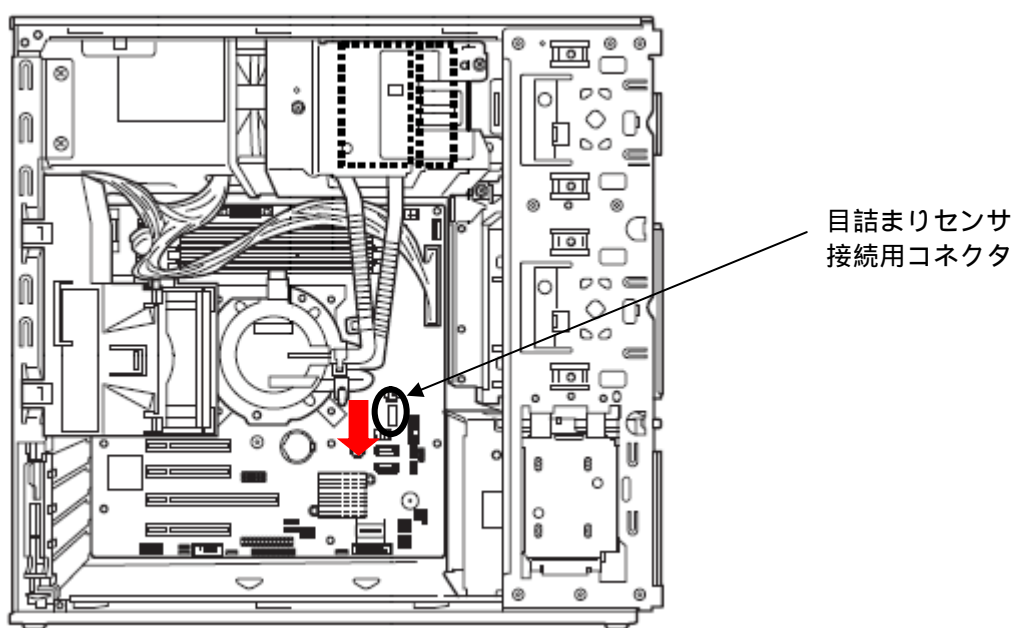

6. フロントベゼルの取り外しと逆の手順で防塵ベゼルを取り付け、その後ネジを締めます。

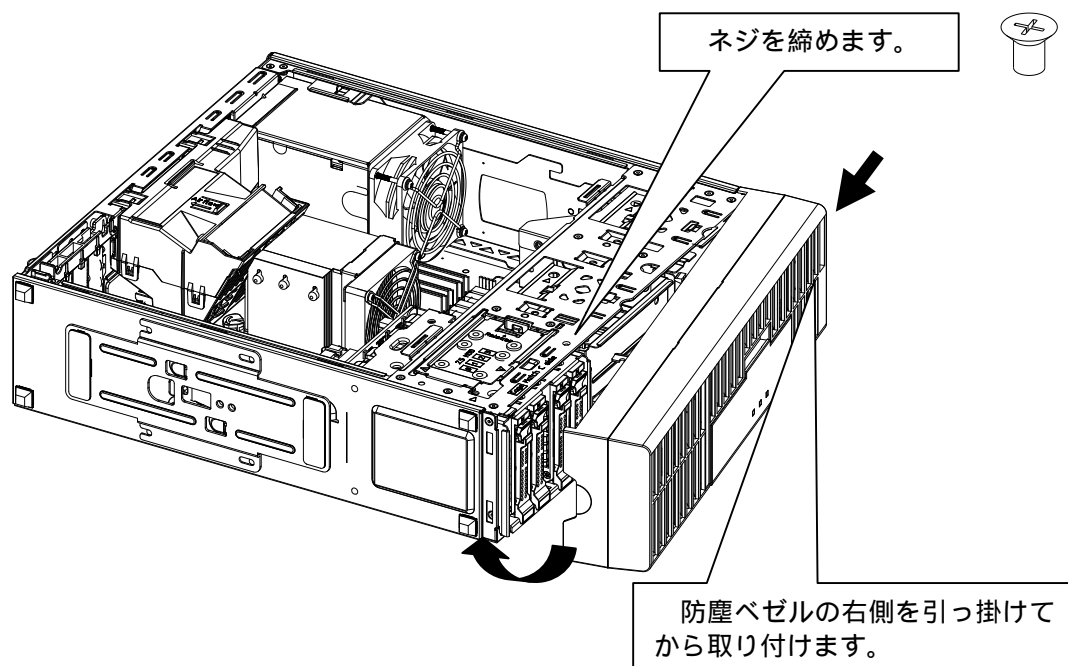

注意：防塵ベゼルを装置に取り付ける際、センサ接続用ケーブルを挟まない様、十分注意してください。

7. 取り外しと逆の手順でサイドカバーを取り付けてください。

4. ソフトウェアのインストール

目詰まり検出ソフトウェアのインストール手順については、添付CD-ROMのUser's Guideフォルダ内の“目詰まり検出ソフトウェア_操作説明書”をご確認ください。

【メモ】

ご注意

- (1) 本書の内容の一部または全部を無断で転載することは固くお断りします。
- (2) 本書の内容について、将来予告なしに変更することがあります。
- (3) 弊社の許可なく複製・改変などを行うことはできません。
- (4) 本書の内容については、万全を期して作成しておりますが、万一ご不審な点や誤り、記載もれなどお気づきの点がございましたら、お買い求めの販売店にご連絡ください。
- (5) 本製品を運用した結果の影響については(4)項にかかわらず、いかなる責任も負いかねますのでご了承ください。

本書は再生紙を使用しています。

NEC

目詰まり検出センサ ユーザーズガイド

856-180193-041-00 1版



856-180193-041-00

N8146-41 Filter Replacement Sensor User's Guide

Preface

Thank you very much for your purchase of this product.

The guide is intended to allow you to install and use the product correctly and safely. Read the guide carefully before handling the product.

In order to ensure a safe upgrade of your server, please read this document carefully.

To install this option product to your server, read, understand and confirm the instruction (including CAUTION) in the User's Guide of the server prior to installation. User's Guide is included in EXPRESSBUIDER DVD-ROM.

**Keep this User's Guide at hand for quick reference at anytime necessary.
Be sure to read "Safety Precautions" before handling this product.**



Precautions for Use (Be Sure to Read)

The following provides information required to use the product safely and properly.

Safety Indications

To prevent personal injury and/or property damage from occurring, symbols as shown below are used in this manual to draw user's attention. Fully understand the meaning of symbols before reading this manual.

In this User's Guide, WARNING or CAUTION is used to indicate a degree of danger. These terms are defined as follows:

	WARNING	Indicates there is a risk of death or serious personal injury.
	CAUTION	Indicates there is a risk of burns, other personal injury, or property damage.

Precautions and notices against hazards are presented with one of the following two symbols. The individual symbols are defined as follows:

	Attentions	This symbol indicates the presence of a hazard if the instruction is ignored. An image in the symbol illustrates the hazard type.	(Example) (Hot surface)
	Prohibited Actions	This symbol indicates prohibited actions. An image in the symbol illustrates a particular prohibited action.	(Example) (Do not disassemble)

Attentions

	Indicates a general notice or warning that cannot be specifically identified.		Indicates there is a risk of fire or fumes.
--	---	--	---

Prohibited Actions



	Indicates a general prohibited action that cannot be specifically identified.
--	---







Mandatory Actions

	Unplug the power cord of the server. Otherwise, an electric shock or fire may be caused.
--	--

Safety Precautions

Observe the following notes to use the product safely.

 WARNING	
	<p>If smoke, odor, or noise is present, immediately turn off the server and disconnect the power plug from the outlet, then contact the store where you purchased the product or your maintenance service company. Using the server in such conditions may cause a fire.</p>

 CAUTION	
<p>Make sure to refer to the User's Guide provided with your server when installing this product into your server.</p>	
	<p>Prior to installing or removing an option, make sure to unplug all system AC power cords from their electrical outlets. Remove all cables connecting the system with external devices. Failure to disconnect the power cords before opening the system can result in personal injury and equipment damage.</p>
	<p>Note sufficiently that your fingers may not be caught or cut by a mechanical part at inside of server.</p>
	<p>Note sufficiently that your fingers may not be caught or cut by a mechanical part at inside of server.</p>
	<p>Be sure to install the product on a server specified in this manual. Installing the product on any other server than specified may cause malfunction of the server or a fire due to insufficient cooling effect in the target server.</p>
	<p>Do not install or store the server in the following places or any place that does not satisfy the environmental conditions specified in this manual. Failure to follow this instruction may cause a fire or malfunction of the server.</p> <ul style="list-style-type: none"> Places near chemicals or chemical substances Places exposed to direct sunlight Places where the air includes much humidity Places of uneven or slanting floor Places with drastic changes in temperature Place where vibration or impact may be generated Places with corrosive gas (sulfur dioxide, hydrogen sulfide, nitrogen dioxide, chlorine, ammonia, ozone, etc.) in presence Places where the air includes components accelerating corrosion (ex. sulfur, sodium chloride) or conductive metals.

Handling precautions (for proper operations)

Be sure to observe the following precautions for the proper functioning of the product. Ignoring the precautions may cause server malfunction or failure.

- Pay attention not to hit the product against a solid object during installation, removal, or storage.
- Do not drop the product even when it is packaged. Doing so may cause damage to the product.

< Notations used in this User's Guide >

The following symbol is used in this document. It has the following meaning.



Indicates items that are mandatory or require attention when using the product.

Transfer to Third Party

Make sure to provide all accessories including this manual along with the product to a third party.

Disposal

Dispose of this product according to all national laws and regulations. Dispose of this product as plastic garbage.

1 . Notes on Using the Product





- This product is dedicated to Express5800/T110f-S servers and used with N8146-39/40 Dust Proof Bezel.

2 . Components

Check components according to the list below.

Item No.	Name	Q'ty	Description
1	Filter Replacement Sensor	2	
2	Sensor Cable	1	
3	Filter Monitor (CD-ROM)	1	
4	User's Guide	1	This Document

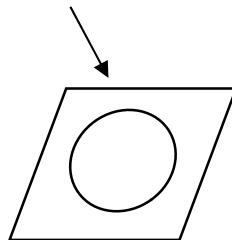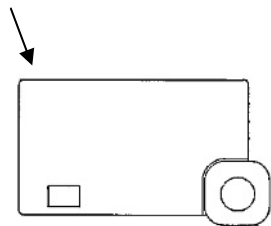


3 . Installing the Filter Replacement Sensor to the Server

Take the steps below to install the sensor to the server.



- Read the sections "Safety Precautions" and "Handling precautions" in the User's Guide of the server in which you are going to install the bezel to install or remove the bezel safely and properly.


1. Refer to "N8146-39/40 Dust Proof Bezel User's Guide" and remove the bezel from the server.
2. Refer to the figure below to install a filter replacement sensor to the sensor slot.

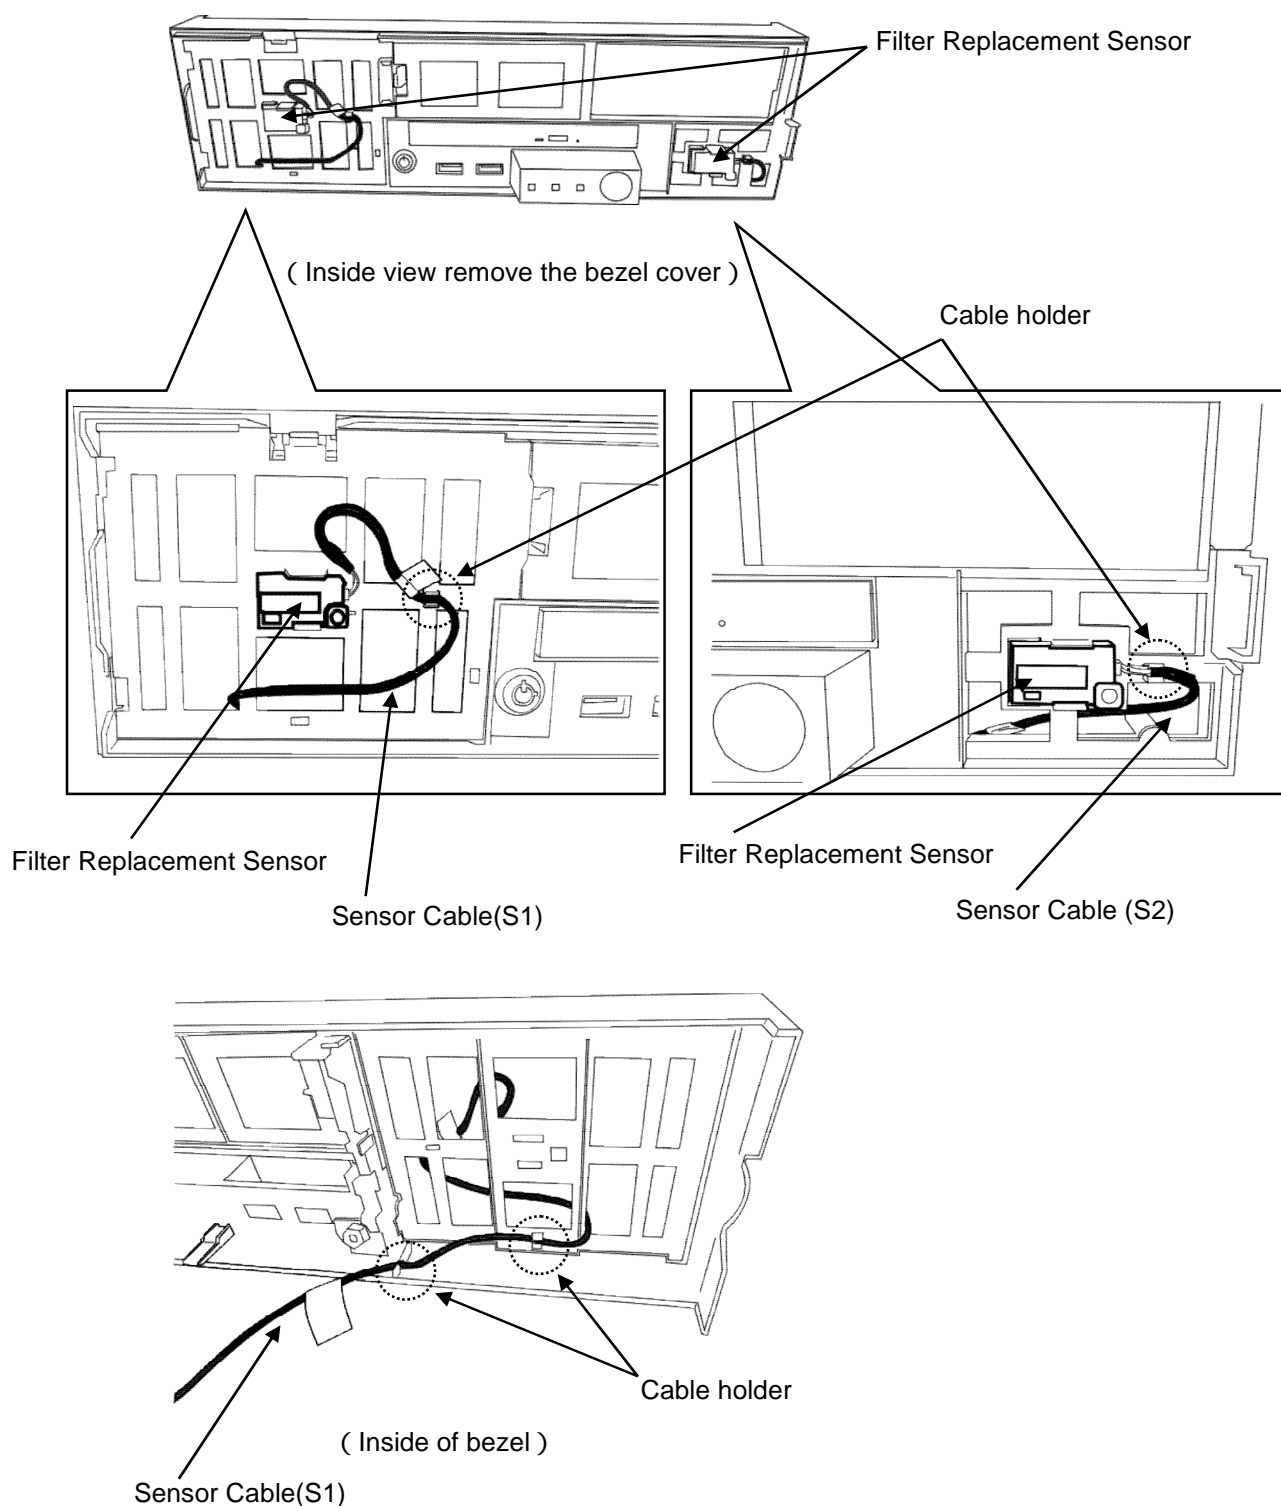




- Be aware of the side and orientation of the sensor. If the sensor is installed incorrectly, it can not work properly.
After the installation, confirm that the sensor is installed in the slot correctly and fixed firmly.


3. Pull in the sensor cable from the gap between the optical disk drive and front USB port on the front of the server. See the figure below.

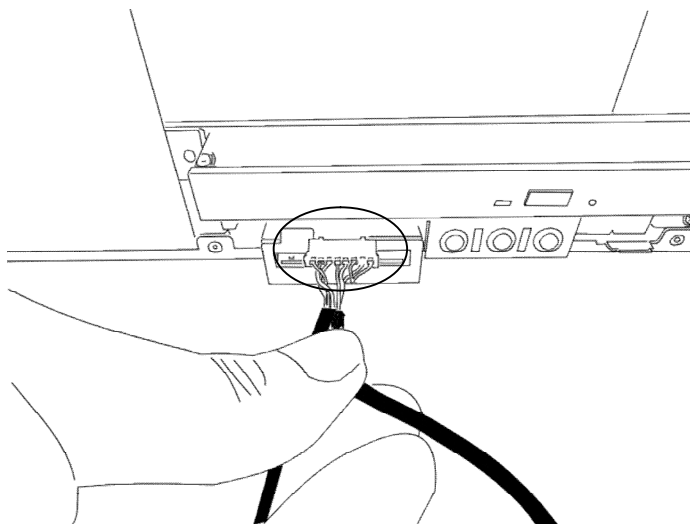


4. Passed through each position through the left side of the front USB port (S1) and the right side of the LED (S2) the sensor cable. See the figure below.

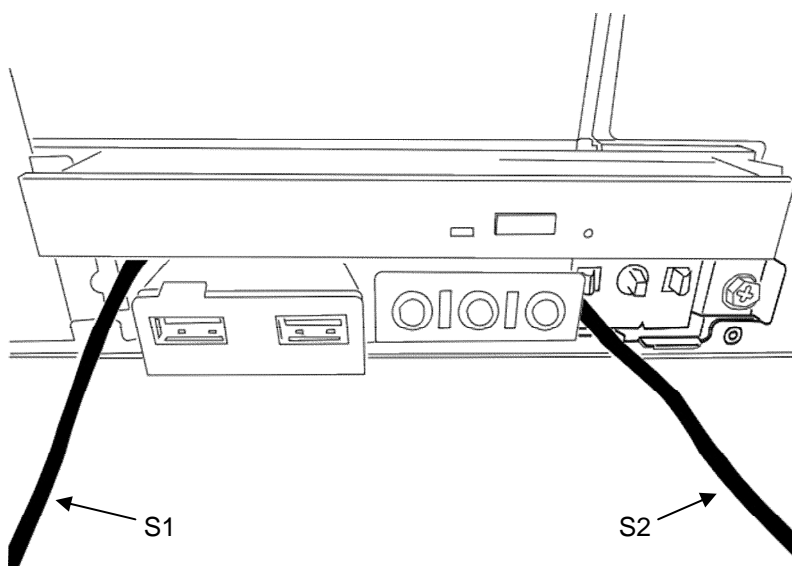


5. The Sensor Cable connect to the connector on the motherboard to match the orientation of the arrow.

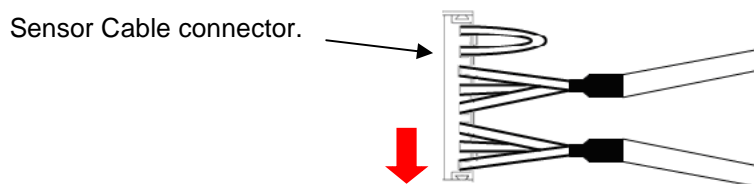


<Air cooling model>

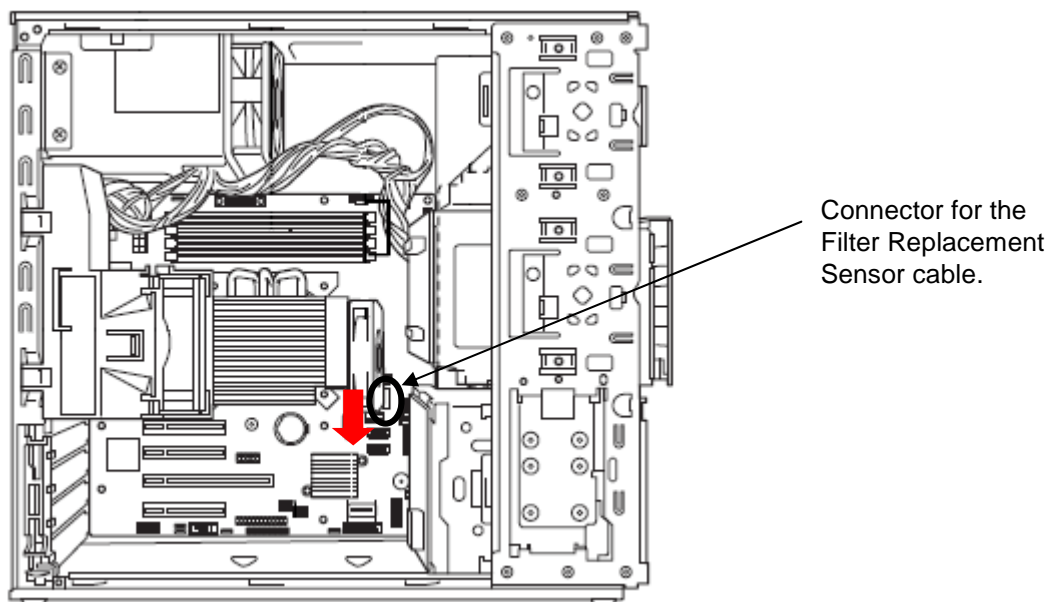

<Liquid cooling model>

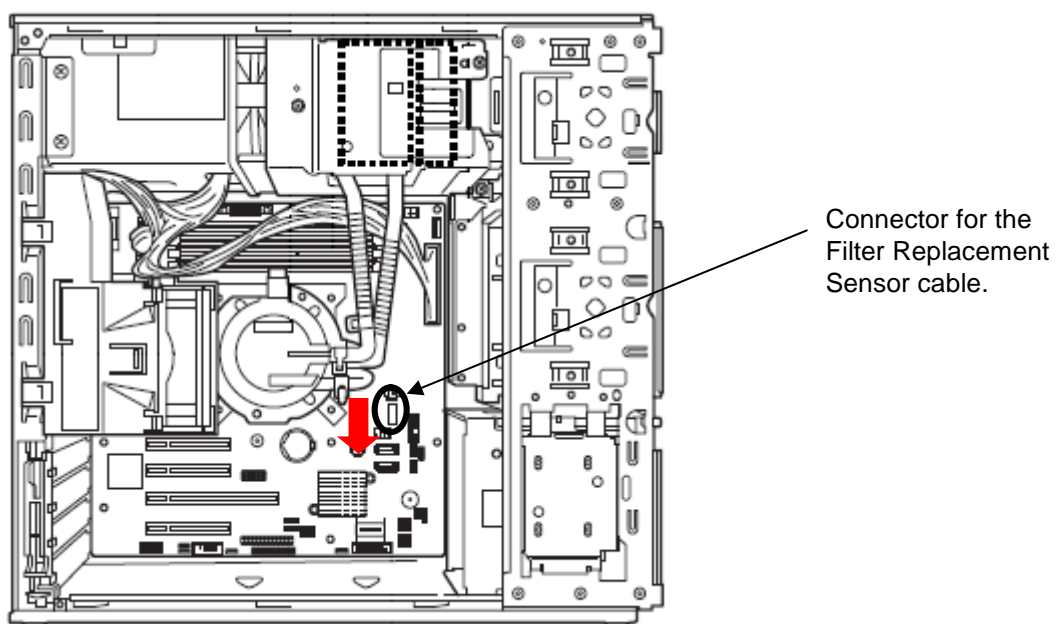

6. Install the dust-proof bezel in reverse order of removal procedure of front bezel.

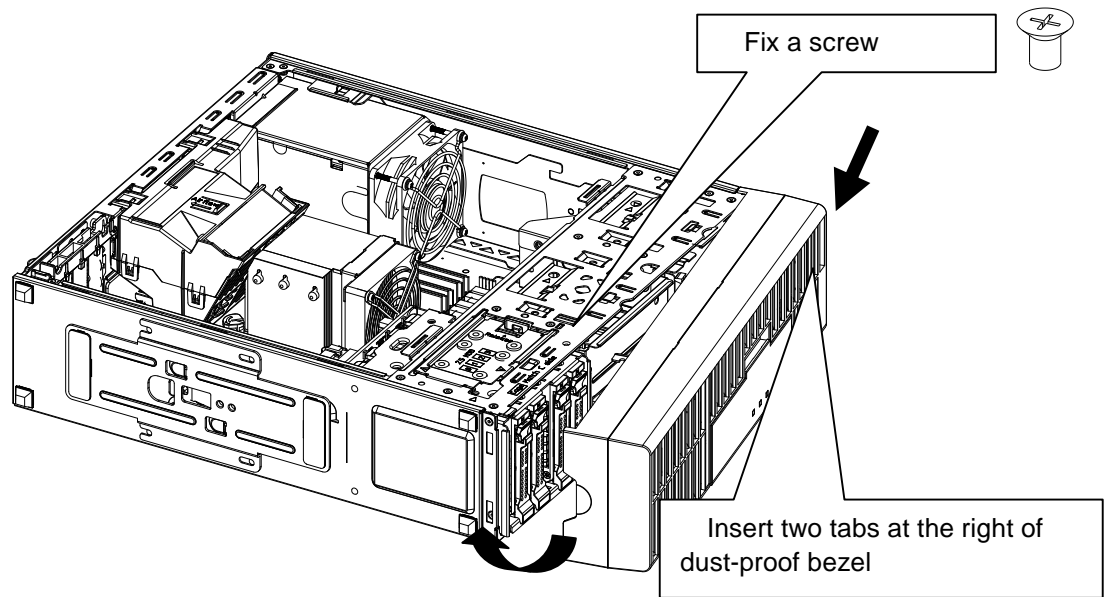

Caution: Be careful to do not pinch the sensor cable when attached to the server dust-proof bezel.

7. Install the side cover by the reverse procedure of removing.

4 . Filter Monitor Software Install

Regarding the installation procedure for the Filter Monitor Software, refer to
“Filter Monitor Software Instruction Guide” in the *User’s Guide* folder of the attached CD-ROM.

【MEMO】

Remarks

- (1) No part of this manual may be reproduced in any form without the prior written permission of NEC Corporation.
- (2) The contents of this User's Guide may be revised without prior notice.
- (3) The contents of this User's Guide shall not be copied or altered without the prior written permission of NEC Corporation.
- (4) All efforts have been made to ensure the accuracy of all information in this User's Guide. If you notice any part unclear, incorrect, or omitted in this User's Guide, contact the sales agent where you purchased this product.
- (5) NEC assumes no liability arising from the use of this product, nor any liability for incidental or consequential damages arising from the use of this User's Guide regardless of Item (4).

Printed on recycled paper.

NEC

Filter Replacement Sensor User's Guide
856-180193-041-00 1st Edition



856-180193-041-00