

**ユーザズガイド(第1版) / User's Guide(1st. Edition)**

本書を熟読し、大切に保管してください。


Read this document carefully, and keep at hand so that it is available whenever necessary.

**構成品一覧表 / Packing List**

本製品には以下のものが添付されています。確認してください。

This product is shipped with the following items, verify package contents:

品名 Name	数量 Qty.	備考 Memo.
GPU コンピューティングカード	1	nVidia Tesla V100 PCIE 32GB
保証書	1	組込出荷時は添付されません。 本体装置の保証書に記載されます。 Only for using in Japan.
シリアル番号ラベル	1	大切に保管してください
取扱説明書	1	安全上の注意事項

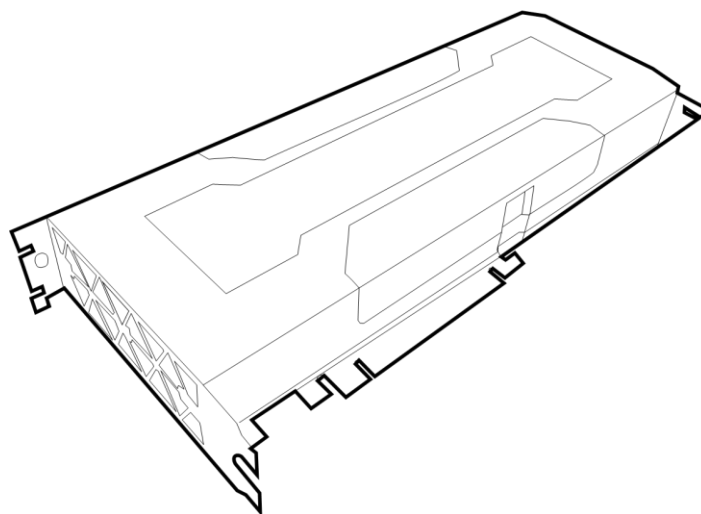

※本製品を本体装置に組み込んでお買い求め頂いた場合、本体装置に添付された保証書が本製品の保証書を兼ねます。 本体装置の保証書に本製品の記載があるかご確認ください。

**Note:** This warranty is available only for using in Japan.  
Do not use it in any other than Japan.

# 目次

使用上のご注意 -必ずお読みください-	J-1
安全に関わる表示について	J-1
本書で使用する記号とその内容	J-2
安全上のご注意	J-3
はじめに	J-7
本書について	J-7
本文中の記号について	J-7
1. 本製品について	J-8
1.1. 特徴	J-8
1.2. 各部の名称と機能	J-8
2. 本体装置への取り付けと取り外し	J-10
3. ドライバ/ソフトウェアのセットアップ	J-11
3.1. Windows ドライバ	J-11
3.2. Linux ドライバ	J-14
4. トラブルシューティング	J-17
4.1. システムが起動できない場合	J-17
5. 運用における注意事項	J-19
6. 仕様	J-20
6.1. 製品仕様	J-20

---

# Table of Contents

<b>Precautions for Use</b>	-Be sure to read this section - .....	E-2
<b>Safety Indication</b> .....		E-2
<b>Symbols Used in This Guide</b> .....		E-3
<b>Precautions for Safety</b> .....		E-4
<b>Introduction</b> .....		E-8
<b>About this Guide</b> .....		E-8
<b>Text Conventions</b> .....		E-8
<b>1. General Description</b> .....		E-9
<b>1.1. Overview</b> .....		E-9
<b>1.2. Description</b> .....		E-9
<b>2. Hardware Installation/Uninstallation</b> .....		E-11
<b>3. Driver/Software Setup</b> .....		E-12
<b>3.1. Windows Driver</b> .....		E-12
<b>3.2. Linux Driver</b> .....		E-15
<b>4. Trouble Shooting</b> .....		E-18
<b>4.1. Unable to Start the System</b> .....		E-18
<b>5. Notes in operation</b> .....		E-19
<b>6. Specification</b> .....		E-20
<b>6.1. General Specification</b> .....		E-20

## 商標について

記載の会社名および商品名は各社の商標または登録商標です。

NVIDIA, Tesla, Quadro, PhyX, CUDA, Pascal は米国およびその他の国における NVIDIA Corporation の商標または登録商標です。

OpenGL は、米国およびその他の国における Silicon Graphics, Inc. の商標または登録商標です。

Microsoft、Windows および Windows Server、またはその他のマイクロソフト製品の名称および製品名は、米国 Microsoft Corporation の、米国およびその他の国における商標または登録商標です。

PCI-Express は PCI-SIG の登録商標です。

X Window System は X Consortium, Inc. の商標です。

Red Hat、Red Hat Enterprise Linux は、米国およびその他の国における Red Hat, Inc. の登録商標または商標です。

## ご注意

1. 本書の内容の一部または全部について、許可なく複製・転載・翻訳・他形式・メディアへの変換等を行うことは、禁止されています。
2. 本書の内容については、将来予告なしに変更することがあります。
3. 本書の内容については、万全を期して作成いたしましたが、万一お気付きの点や、ご不明の点がありましたら、販売店または弊社までご連絡ください。
4. 本製品を運用した結果の影響については、上記 3 項にかかわらずいかなる責任も負いかねますので、ご了承ください。
5. 本書は、本体装置の操作に熟知した管理者、または保守員向けに記載されております。本体装置の取り扱いや、各種 OS の操作、その他一般的かつ、基本的な事柄につきましては記載を省いておりますのであらかじめご了承ください。

© NEC Corporation 2019

日本電気株式会社の許可無く、本書の複製・改変などを行うことはできません。

## クラスB情報技術装置

この装置は、クラスB情報技術装置です。この装置は、家庭環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。取扱説明書に従って正しい取り扱いをして下さい。

VCCI-B

## Trademarks

Microsoft, Windows, and Windows Server are registered trademarks or trademarks of Microsoft Corporation in the United States and other countries.

OpenGL is a trademark or registered trademark of Silicon Graphics, Inc. in the United States and other countries.

NVIDIA, Tesla, Quadro, PhyX, CUDA, Pascal are registered trademarks or trademarks of NVIDIA Corporation in the United States and other countries.

PCI Express is a trademark of Peripheral Component Interconnect Special Interest Group.

X Window System is a trademark of X Consortium, Inc.

RedHat is a registered trademark of Red Hat, Inc. in the U.S. and other countries.

### Note

1. No part of this guide may be reproduced, transmitted, translated in any form, or converted to medias without prior written permission
2. The contents of this guide are subject to change without prior notice.
3. All efforts have been made to ensure the accuracy of all information in this guide. If you find any part unclear, incorrect, or omitted in this guide, contact your service representative.
4. The company assumes no liability arising from the use of this product, nor any liability for incidental or consequential damage arising from the use of this guide regardless of 3 above.
5. This guide is created for the manager or the maintenance person who is well informed about the operation of this device. Note that the basic information, such as the operation procedures of the device and OS, is omitted.

No part of this guide may be reproduced or changed in any form without prior written permission of NEC Corporation

© NEC Corporation 2019

This product, is supplied, warranted and supported by NEC. NEC's warranty and support terms and conditions, contact points and procedures take precedence over those of HPE. Per EU Decision 768/2008/EC, HPE is the manufacturer of record.

## FCC Compliance Information Statement, Class B

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for assistance.

## Industry Canada Class B Emission Compliance Statement/ Avis de conformité à la réglementation d'Industrie Canada :

CAN ICES-3(B)/NMB-3(B)

## KCC Notice Class B (Republic of Korea Only)

B급 기기 (가정용 방송통신기자재)	이 기기는 가정용(B급) 전자파적합기기로서 주로 가정에서 사용하는 것을 목적으로 하며, 모든 지역에서 사용할 수 있습니다.
------------------------	--

### Importer EU Contact:

NEC Nederland B.V.

Olympia 4, 1213 NT Hilversum, The Netherlands

### Trademark, name and address of the manufacturer:

NVIDIA Corporation

2788 San Tomas Expressway, Santa Clara, CA 95051 USA

## Disposing of your used product

### In the European Union



EU-wide legislation as implemented in each Member State requires that used electrical and electronic products carrying the mark (left) must be disposed of separately from normal household waste. This includes workstation or electrical accessories. When you dispose of such products, please follow the guidance of your local authority or ask the shop where you purchased the product, or if applicable, follow applicable legislation or agreement you may have. The mark on electrical and electronic products only applies to the current European Union Member States.

### Outside the European Union

If you wish to dispose of used electrical and electronic products outside the European Union, please contact your local authority and ask for the correct method of disposal.

### Importer EU Contact:

NEC Nederland B.V.

Olympia 4, 1213 NT Hilversum, The Netherlands

This product is RoHS Compliant.

### China RoHS Declaration

产品中有害物质的名称及含量

部件名称	有害物质					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr6+)	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
印刷电路板组件	x	o	o	o	o	o

本表格依据 SJ/T 11364 的规定编制。

o: 表示该有毒有害物质在该部件所有均质材料中的含量均在 GB/T 26572 标准规定的限量要求以下

x: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 GB/T 26572 标准规定的限量要求

### BSMI RoHS / 限用物質含有情況標示聲明書

單元 Unit	限用物質及其化學符號 Restricted substances and its chemical symbols					
	鉛 Lead (Pb)	汞 Mercury (Hg)	鎘 Cadmium (Cd)	六價鉻 Hexavalent chromium (Cr +6 )	多溴聯苯 Polybrominated biphenyls (PBB)	多溴二苯醚 Polybrominated diphenyl ethers (PBDE)
組裝電路板 PCBA	-	o	o	o	o	o

備考1. “超出0.1 wt %”及“超出0.01 wt %”係指限用物質之百分比含量超出百分比含量基準值。  
Note 1 : “Exceeding 0.1 wt %” and “exceeding 0.01 wt %” indicate that the percentage content of the restricted substance exceeds the reference percentage value of presence condition.

備考2. “o”係指該項限用物質之百分比含量未超出百分比含量基準值。  
Note 2 : “o” indicates that the percentage content of the restricted substance does not exceed the percentage of reference value of presence.

備考3. “-”係指該項限用物質為排除項目。  
Note 3 : The “-” indicates that the restricted substance corresponds to the exemption.

### Turkish RoHS information relevant for Turkish market

EEE Yönetmeliğine Uygundur

### Vietnam RoHS information relevant for Vietnam market

Complying with “CIRCULAR, No.30/2011/TT-BCT (Hanoi, August 10 2011), Temporary regulations on content limit for certain hazardous substances in electrical products”

この取扱説明書は、必要なときすぐに参照できるよう、お手元に置いておくようにしてください。「使用上のご注意」を必ずお読みください。



## 使用上のご注意

-必ずお読みください-

本製品を安全に正しくご使用になるために必要な情報が記載されています。

## 安全に関わる表示について

本製品を安全にお使い頂くために、この取扱説明書の指示に従って操作してください。

この取扱説明書には装置のどこが危険でどのような危険に遭うおそれがあるか、どうすれば危険を避けられるかなどについて説明されています。

取扱説明書では危険の程度を表す言葉として、「警告」と「注意」という用語を使用しています。

それぞれの用語は次の意味を持つものとして定義しています。



“取扱いを誤った場合、使用者が死亡または重傷(\*1)を負うことが想定されること”を示します。




“取扱いを誤った場合、使用者が傷害(\*2)を負うことが予想されるか、または物的損害(\*3)の発生が想定されること”を示します。

- \*1: 重傷とは、失明やけが、やけど(高温・低温)、感電、骨折、中毒などで後遺症が残るものおよび治療に入院・長期の通院を要するものをさします。
- \*2: 傷害とは、治療に入院や長期の通院を要さない、けが、やけど、感電などをさします。
- \*3: 物的損害とは、家屋・家財および家畜・ペット等にかかわる拡大損害をさします。

危険に対する注意・表示は次の3種類の記号を使って表しています。それぞれの記号は次のような意味を持つものとして定義しています。

	注意の喚起	この記号は、危険が発生するおそれがあることを表します。記号の中の絵表示は危険の内容を図案化したものです。	 (例) (感電注意)
	行為の禁止	この記号は行為の禁止を表します。記号の中や近くの絵表示は、してはならない内容を図案化したものです。	 (例) (分解禁止)
	行為の強制	この記号は行為の強制を表します。記号の中の絵表示は、しなければならない行為の内容を図案化したものです。危険を避けるためには、この行為が必要です。	 (例) (プラグを抜け)



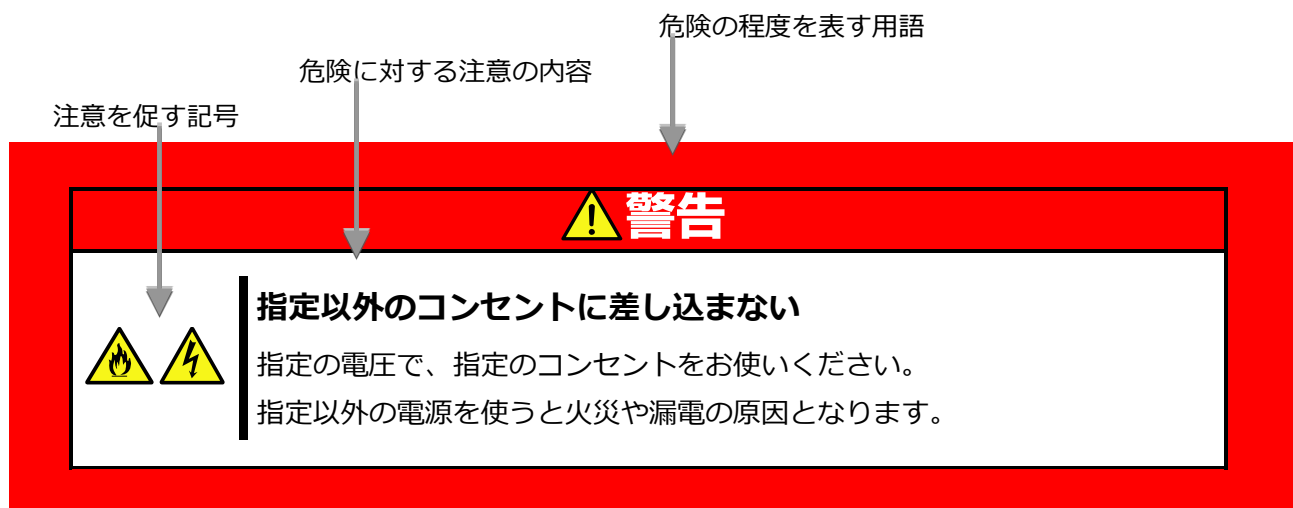

## 本書で使用する記号とその内容

### 注意の喚起

	感電のおそれのあることを示します。		発煙または発火のおそれがあることを示します。
	特定しない一般的な注意。警告を示します。		高温による傷害を負うおそれがあることを示します。

### 行為の禁止

	本装置を分解。修理。改造しないでください。感電や火災のおそれがあります。		水や液体がかかる場所で使用しないでください。水に濡らすと感電や発火のおそれがあります。
	特定しない一般的な禁止を示します。		

### 行為の強制

	本装置の電源プラグをコンセントから抜いてください。火災や感電のおそれがあります。
--	--

## 安全上のご注意

本装置を安全にお使い頂くために、ここで説明する注意事項をよく読んで理解し、安全に活用してください。  
記号の説明については「安全に関わる表示について」(J-1 ページ) の説明を参照してください。

### 一般的な注意事項

#### 警告



##### 人命に関わる業務や高度な信頼性を必要とする業務には使用しない

本製品は医療機器・原子力設備や機器、航空宇宙機器・輸送設備や機器など、人命に関わる設備および高度な信頼性を必要とする設備などには使用しないでください。これらの設備に本製品を使用した結果、人身事故、財産損害などが生じても当社はいかなる責任も負いかねます。



##### 煙や異臭、異音が生じたまま使用しない

万一、煙、異臭、異音などが生じた場合は、直ちに装置の電源を OFF にした後、本体装置の電源コードをコンセントから取り外してください。その後、お買い求めの販売店または保守サービス会社にご連絡ください。そのまま使用すると火災の原因となります。



##### 針金や金属片を差し込まない

アダプタに金属片や針金などの異物を差し込まないでください。感電の危険があります。

#### 注意



##### アダプタに水や異物を入れない

アダプタに水などの液体、ピンやクリップなどの異物を入れないでください。火災や感電、故障の原因となります。もし入ってしまったときは、すぐ電源を OFF にして、電源コードをコンセントから抜いてください。分解しないで、販売店または保守サービス会社にご連絡ください。

## 設置・移動・保管・接続に関する注意事項

### 注意



#### 指定以外のインタフェイスクーブルを使用しない

インタフェイスクーブルは、適合するものを使用し、接続する装置やコネクタを確認した上で接続してください。指定以外のクーブルを使用したり、接続先を誤ったりすると、ショートにより火災を起こすことがあります。

また、インタフェイスクーブルの取り扱いや接続について、次の注意をお守りください。

- 破損したクーブルコネクタを使用しない
- クーブルを踏まない
- クーブルの上にものを載せない
- クーブルの接続がゆるんだまま使用しない
- 破損したクーブルを使用しない



#### 腐食性ガスの存在する環境で使用または保管しない

腐食性ガス（二酸化硫黄、硫化水素、二酸化窒素、塩素、アンモニア、オゾンなど）の存在する環境に設置し、使用しないでください。

また、ほこりや空気中に腐食を促進する成分（塩化ナトリウムや硫黄など）や導電性の金属などが含まれている環境へも設置しないでください。装置内部のプリント板が腐食し、故障および発煙・発火の原因となるおそれがあります。

もしご使用の環境で上記の疑いがある場合は、販売店または保守サービス会社にご相談ください。

## 廃棄・譲渡に関する注意事項



- 本製品を廃棄する場合は各自治体の条例に従ってください。詳しくは、各自治体にお問い合わせください。
- 本製品を他人に譲渡する場合は、本書および添付品すべてを必ず一緒に渡してください。

## 取扱注意事項

### 警告



#### 分解・修理・改造はしない

本製品を分解したり、修理・改造を行ったりしないでください。  
感電や火災の危険があります。



#### 本体装置の電源コードを抜く

本体装置への取り付け・取り外しをするときには、必ず電源コードをコンセントから外してください。感電するおそれがあります。

### 注意



#### 高温に注意する

本体装置の電源を OFF にした直後は、装置内の部品が高温になっています。十分に冷めたことを確認してから取り付け／取り外しを行ってください。



#### 人体から静電気を放電してから取り扱う

静電気による部品の破壊を防ぐため、アダプタに触れる前には、必ず人体から静電気を放電してください。



#### アダプタ上で塗装されていない金属部分には触れない

アダプタの各部品の端子部、およびアダプタ上で塗装されていない金属部分には、決して触れないでください。汚れや腐蝕等により、接触不良が発生するおそれがあります。また、濡れた手や汚れた手で触れないでください。



#### アダプタを無理に挿入しない

アダプタを本体装置に搭載する際は、無理に挿入しないでください。その際アダプタ、および本体装置を破損するおそれがあります。



#### ブラケットの先端部を本体装置のボード部等に触れない

アダプタを拡張スロットに挿入する際、ブラケットの先端が本体装置の他の部位（他の部品、ボードなど）に触れないようにご注意ください。破損するおそれがあります。



#### ケーブルは確実に接続する

ケーブル接続時は、カチッという音がするまでケーブルコネクタを挿入してください。

## 静電気対策について

### 製品の取り付け／取り外しについて

#### 準備確認事項



- (1) 危険防止及び故障防止のため作業を行なう際には、本体装置の電源スイッチをOFFにし、電源プラグをコンセントから抜いてください。但し、ホットスワップ（活線挿抜）対象製品の取り付け／取り外し時の電源スイッチのOFFおよび電源プラグのコンセントからの取り外しは除きます。
- (2) 本製品は静電気に弱い電子部品で構成されています。製品の取り付け／取り外しの際は、静電気による製品の故障を防止するため静電気対策用リストストラップなどの装着により静電気を除去してください。また、リストストラップを使用する場合は、接地された箇所に接続して使用してください。

# はじめに

このたびは、N8105-55 GPU コンピューティングカード(Tesla V100)をお買い求めいただき、誠にありがとうございます。本製品の持つ機能を最大限に引き出すためにも、ご使用になる前に本書をよくお読みになり、装置の取り扱いを十分にご理解ください。




## 本書について

本書は、本製品を正しくセットアップし、安全に使用できるようにするための手引きです。製品のセットアップを行うときや製品の取り扱いがわからないときなどにご利用ください。

本書は常に製品のそばに置いて いつでも見られるようにしてください。

## 本文中の記号について

本書では巻頭で示した安全に関わる注意記号の他に、3種類の記号を使用しています。これらの記号と意味をご理解になり装置を正しくお取り扱いください。

 <b>重要</b>	装置の取り扱いや、ソフトウェアの操作で守らなければならない事柄や、特に注意すべき点を示します。
 <b>チェック</b>	装置やソフトウェアを操作する絵で、確認しておく必要がある点を示します。
 <b>ヒント</b>	知っておくと役立つ情報や、便利なことを示します。

# 1. 本製品について

## 1.1. 特徴

本製品は Express5800 シリーズ専用の GPGPU(General-purpose computing on graphics processing units) です。

本製品は CUDA コアプロセッサを 5120 コア、Tensor コアを 640 コア搭載し、32GB のメモリを搭載した PCI-EXPRESS3.0 対応の GPGPU カードです。カードサイズはフルレングス・フルハイトとなり、2 スロット分を占有する 2 枚幅のカードです。



弊社が指定する本体装置以外には搭載しないでください。  
接続可能な本体装置は本製品を購入された販売店または保守サービス会社にお問い合わせください。



本製品を取り付ける前に、本体装置の取扱説明書を参照して、取り付け可能な PCI Express®スロットを確認してください。


## 1.2. 各部の名称と機能

各部の名称、機能については次の通りとなります。


- **ブラケット**  
本体装置の拡張スロットに本製品を搭載する際に、本体装置に固定させるための金具です。本製品はフルハイトサイズで 2 枚幅のブラケットが取り付けられています。ブラケットは交換できません。
- **リテーナー**  
PCI EXPRESS カードをサーバシャーシ内部の機構に固定するための延長用金具です。本製品はリテーナーを取り付けた状態でフルレングスのサイズとなります。リテーナーは取り外さずにお使いください。
- **電源コネクタ**  
本製品の動作のための補助用電源コネクタです。別売りの「K410-387(00) グラフィックスカード電源ケーブル(8Pin. B タイプ)」を接続してください。本製品後部に装備しています。
- **PCI-Express®コネクタ**  
PCI-EXPRESS 規格に準拠しています。本体装置の PCIEXPRESS スロットにリテンションロックがある場合には、本製品のリテンションフックが固定できます。  
カードエッジサイズ、論理接続レーン数は次の通りです。

型番	準拠規格	カードエッジ	論理レーン数
N8105-55	PCI Express 3.0	x16	x16


## ボード前面

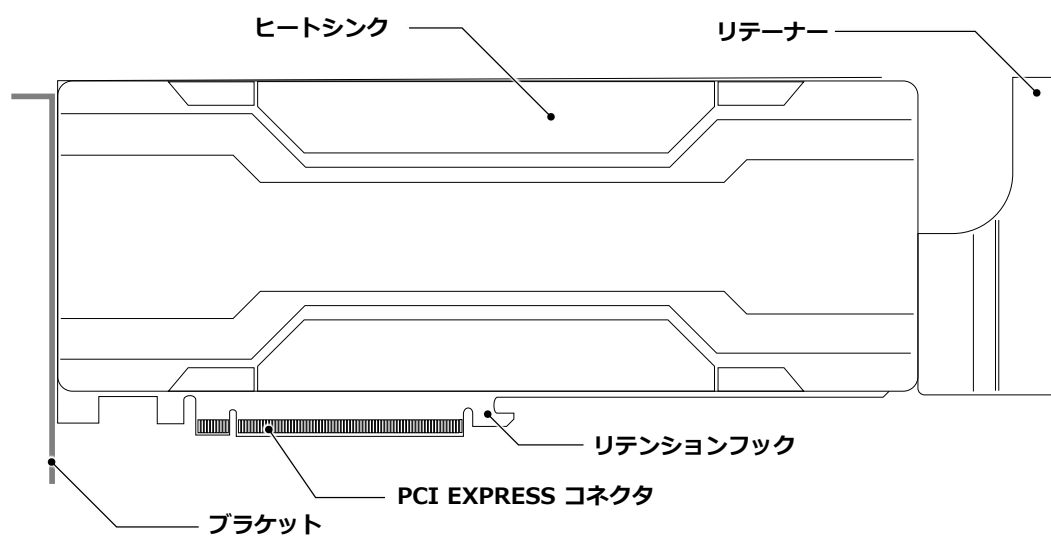

## ボード背面

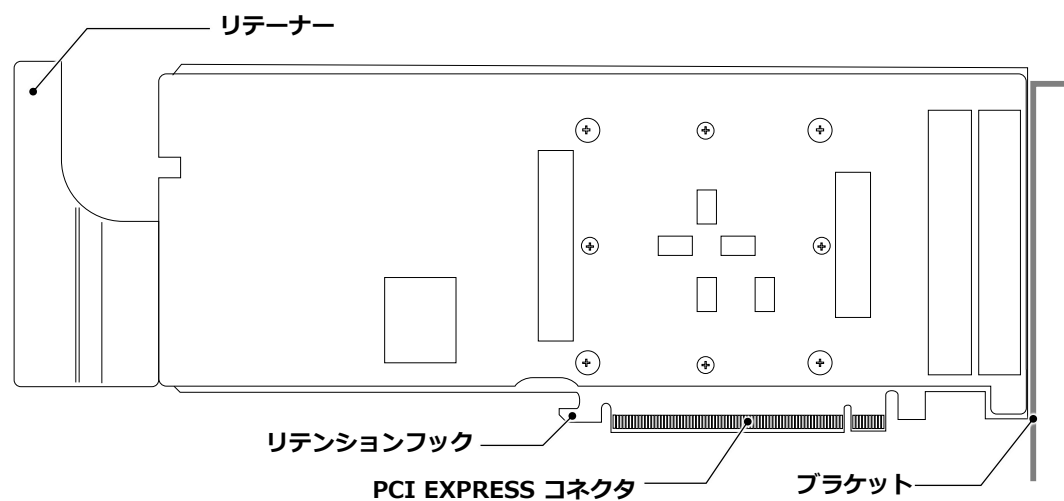

## ボード前部/後部

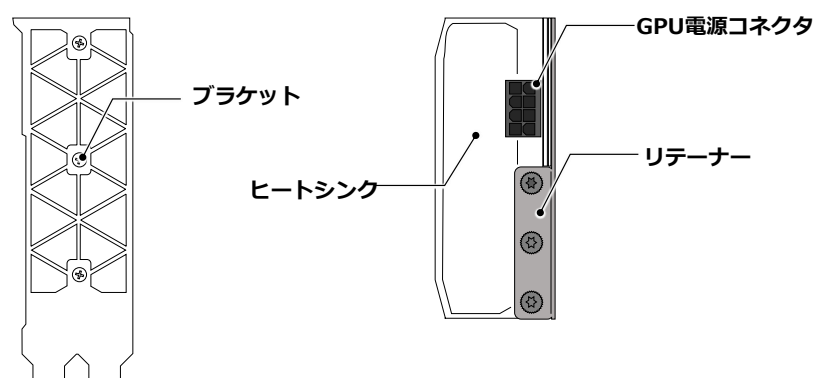

## 各部の名称



## 2. 本体装置への取り付けと取り外し

本製品および K410-387(00) グラフィックスカード電源ケーブル(8Pin. B タイプ)の本体装置への取り付け・取り外しについては、本体装置のユーザーズガイドを参照して作業してください。



- 本製品の取り付けには、「K410-387(00) グラフィックスカード電源ケーブル(8Pin. B タイプ)」が必要です。
- 必ず本体装置のユーザーズガイドを参照して、本製品の取り付け・取り外しを行ってください。



### 警告



#### 本体装置の電源コードを抜く

本体装置への取り付け・取り外しをするときには、必ず電源コードをコンセントから外してください。感電するおそれがあります。



### 注意



#### 高温に注意する

本体装置の電源を OFF にした直後は、装置内の部品が高温になっています。十分に冷めたことを確認してから取り付け／取り外しを行ってください。



#### 人体から静電気を放電してから取り扱う

静電気による部品の破壊を防ぐため、アダプタに触れる前には、必ず人体から静電気を放電してください。



#### アダプタ上で塗装されていない金属部分には触れない

アダプタの通信ポートや、各部品の端子部、およびアダプタ上で塗装されていない金属部分には、決して触れないでください。汚れや腐蝕等により、接触不良が発生するおそれがあります。また、濡れた手や汚れた手で触れないでください。



#### アダプタを無理に挿入しない

アダプタを本体装置に搭載する際は、無理に挿入しないでください。その際アダプタ、および本体装置を破損するおそれがあります。



#### ブラケットの先端部を本体装置のボード部等に触れない

アダプタを拡張スロットに挿入する際、ブラケットの先端が本体装置の他の部位（他の部品、ボードなど）に触れないようにご注意ください。破損するおそれがあります。



#### ケーブルは確実に接続する

ケーブル接続時は、カチッという音がするまでケーブルコネクタを挿入してください。

## 3. ドライバ/ソフトウェアのセットアップ

本製品のドライバ/ソフトウェアは NEC のサポートサイトからダウンロードすることができます。

NEC サポートサイト URL

<http://jpn.nec.com/express/>


「サポート情報」の「ダウンロード」に入り、  
キーワード欄に「N8105-55」を入力して下さい。

また、臨時にドライバがリリースされることもございますので、同サイトのサポート情報を確認  
して、必要に応じて適用してください。

### 3.1. Windows ドライバ


#### 3.1.1. GPU コンピューティングドライバ(ディスプレイドライバ)のインストール

- 1 OS を起動後 Administrator 権限のあるアカウントでログインします。  
※OS の PnP 機能により本製品が検出され、[新しいハードウェアの検出ウィザード]が起動することがあります。この場合には[キャンセル]ボタンをクリックしてウィザードを終了してください。
- 2 あらかじめ用意したドライバを適当なフォルダにコピーして、ZIP ファイルを解凍します。  
ZIP ファイルを右クリックして[全て展開(T)...]を選択してください。
- 3 エクスプローラを起動します。  
タスクバーにある[エクスプローラ]のアイコンをクリックします。  
スタートボタンの上で右クリックし、[エクスプローラ]をクリックします。
- 4 展開されたフォルダ内にある[xxx.exe]をエクスプローラでダブルクリックしてインストーラを起動します。※ご利用の OS やドライバのバージョンによってインストーラのファイル名が異なります。
- 5 ドライバのインストール

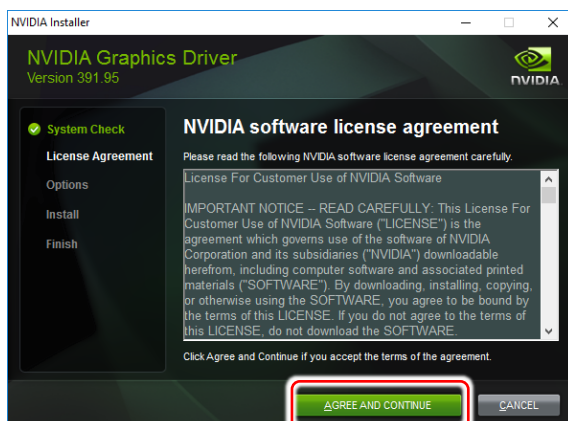

[同意して続行する(A)]ボタンをクリックしてください。

※画面は英語版のものとなります。ボタンの位置を参考にしてください。

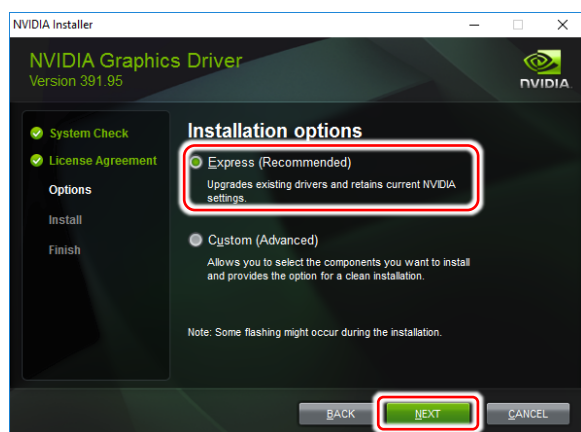

インストールする形式の選択を行います。  
[高速(推奨)(E)]にチェックが入っていることを確認して[次へ(N)]ボタンをクリック




[閉じる(C)]ボタンをクリックしてインストーラを終了してください。

6 インストーラ終了後に OS を再起動してください。

### 3.1.2. GPU コンピューティングドライバ(ディスプレイドライバ)のアンインストール

- 1 OS を起動後 Administrator 権限のあるアカウントでログインします。
- 2 スタートアイコンの上で右クリックし、 [コントロールパネル]⇒[プログラムのアンインストール]の順にクリックします。  
(表示方法が「大きいアイコン」または「小さいアイコン」表示の場合は、[プログラムと機能]をクリックする。)


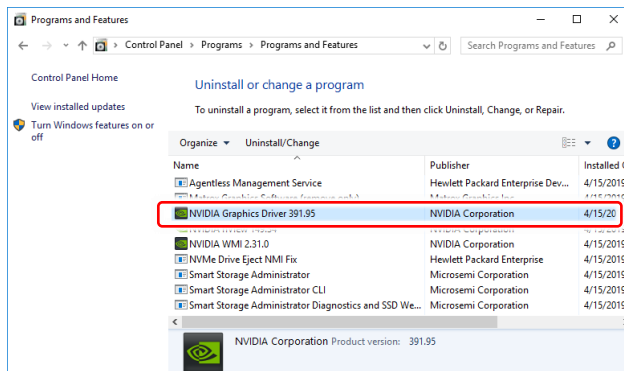


表示されているプログラム一覧から[NVIDIA グラフィックス ドライバー xxx.xx]をダブルクリックしてアンインストールを開始してください。

※ OS に対応したドライバーバージョンが表示されます。

※ このとき、ユーザーアカウント制御に関する許可を求められた場合は[続行]または[はい]をクリックしてアンインストールを続けてください。

[アンインストール(U)]ボタンをクリックしてアンインストールを続行してください。

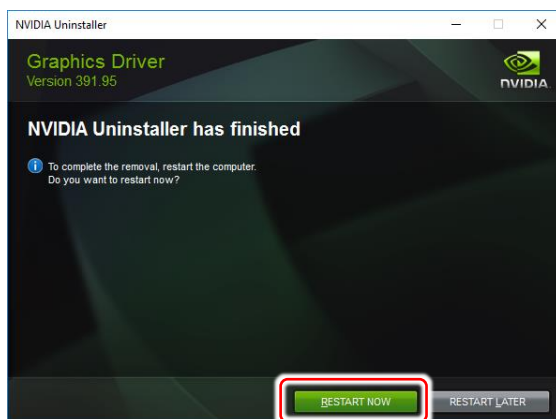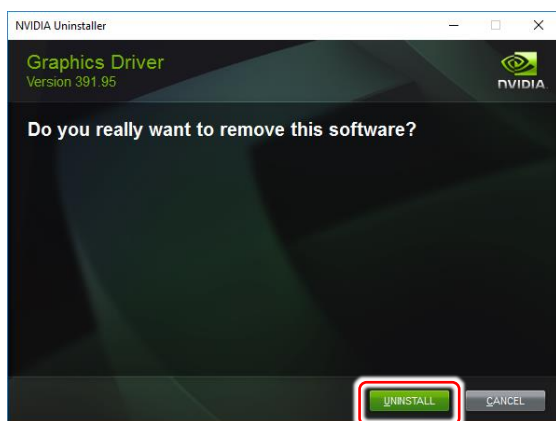

[今すぐ再起動する(R)]ボタンをクリックして再起動を行ってください。

- 3 アンインストールが終わると再起動を要求されます。アンインストールを反映させるにはシステムの再起動が一度必要になりますので、[はい]をクリックして再起動を行ってください。

## 3.2. Linux ドライバ

### 3.2.1. GPU コンピューティングドライバ(ディスプレイドライバ)のインストール

- 1 OS を起動後、root 権限をもったユーザーでログインします。
- 2 あらかじめ用意したドライバを適当なディレクトリにコピーして、ファイルを解凍します。
- 3 解凍後のファイル“xxx.run”に対して実行許可の権限を付与してください。  
端末を起動して対象ファイルのあるディレクトリに移動し、下記コマンドを実行してください。

```
# chmod +x xxx.run
```

- 4 X-Window System が起動している場合は終了させてください。  
端末を起動して下記コマンドを実行してください。

```
# systemctl isolate multi-user.target
```

- 5 nouveau がロードされているかを確認します。  
下記コマンドを実行してください。

```
# lsmod | grep nouveau
```

nouveau がロードされている場合は、**手順 6**に進んでください。

※ご使用の環境によっては、nouveau がロードされていない場合もございますので、その場合は**手順 7**に進んでください。

- 6 nouveau を無効化します。



本手順では、nouveau ドライバをロードしない起動イメージファイルを作成しますので、実施前に手順をご確認していただき、ご使用の環境を考慮した上で十分に注意して実行してください。

以下の手順で nouveau ドライバをロードしない起動イメージファイルを作成します。

- 1) 下記ディレクトリに次のファイルを作成し、内容を記述して保存してください。

ディレクトリ: /etc/modprobe.d/

ファイル名 : blacklist-nouveau.conf

内容 :

```
blacklist nouveau
options nouveau modeset=0
```

- 2) 次のコマンドを実行して起動イメージファイルを作成してください。

```
# dracut --force
```

※このコマンドを実行することで、起動時に nouveau ドライバをロードしない起動イメージファイルを作成します。

(次ページに続く)

3) OS を再起動してください。

再起動後に端末を起動して次のコマンドを実行し、nouveau がロードされていないことを確認してください。

```
# lsmod | grep nouveau
```

X-Window System が起動している場合は、**手順 4** に従って終了させてください。

## 7

GPU ドライバをインストールします。

手順 3 で実行許可の権限を付与したファイルを実行してください。

```
# sh xxx.run
```

インストーラの実行中に選択、または入力を求めてくる場合がございますので、ご使用の環境に合わせた選択、または入力を実施してください。参考までに以下に実行例を記載します。

(実行例)

```
Install NVIDIA's 32-bit compatibility libraries?
```

⇒ **Yes を選択**

```
An incomplete installation of libglvnd was found. All of the essential  
libglvnd libraries are present, but one or more optional components are  
missing. Do you want to install a full copy of libglvnd? This will  
overwrite any existing libglvnd libraries.
```

⇒ **Install and overwrite existing files を選択**

```
Installation of the kernel module for the NVIDA Accelerated Graphics  
Driver for Linux-x86_64 (version xxx) is now complete.
```

⇒ **OK を選択**

## 8

GPU ドライバのインストールは完了です。OS を再起動してください

### 3.2.2. GPU コンピューティングドライバ(ディスプレイドライバ)のアンインストール

- 1 OS を起動後、root 権限をもつユーザーでログインします。
- 2 X-Window System が起動している場合は終了させてください。
- 3 下記コマンドを実行し、GPU ドライバをアンインストールしてください。  

```
# nvidia-installer -uninstall
```

アンインストーラーの実行中に選択、または入力を求めてくる場合がございますので、ご使用の環境に合わせた選択、または入力を実施してください。参考までに以下に実行例を記載します。

```
If you plan to no longer use the NVIDIA driver, you should make sure that
no X screens are configured to use the NVIDIA X driver in your X
configuration file. If you used nvida-xconfig to configure X, it may have
created a backup of your original configuration. Would you like to run
'nvidia-xconfig --restore-original-backup' to attempt restoration of the
original X configuration file?
```

⇒**NO** を選択

```
Uninstallation of existing driver: NVIDIA Accelerated Graphics Driver
for Linux-x86_64(xxx) is complete.
```

⇒**OK** を入力

- 4 GPU ドライバのアンインストールは完了です。  
OS を再起動してください。

## 4. トラブルシューティング



- 本章では各事象に対する確認のため本製品の取り外し/取り付けを前提とした作業を記載しています。事前に必ず取扱注意事項をお読みください。
- 必要に応じて本製品をお買い求めの販売店または保守サービス会社に連絡してください。

### 4.1. システムが起動できない場合

#### ボードの取り付けを確認してください

☐ **搭載スロットは適切か**

本体装置のシステム構成ガイド等を参照して、本製品の搭載可能スロットに搭載されていることを確認してください。異なる場合は正しいスロットに搭載してください。

☐ **取り付けは正しいか**

本体装置のスロットに、ボードがしっかりと差し込まれているか確認してください。また、固定ネジ(またはクリップ)でボードがしっかりと固定されていることを確認してください。

該当する場合は、取り付けなおしてください。

☐ **補助電源コネクタは取り付けられているか**

本製品は PCI-Express®コネクタからの給電の他、本体装置から補助電源コネクタを通しての給電が必要となります。本体装置のシステム構成ガイド等を参照して、本製品の搭載可能スロットに搭載されていることを確認し、「K410-387(00) グラフィックスカード電源ケーブル(8Pin. B タイプ)」が接続されていることを確認してください。

☐ **PCI-Express®コネクタなど本体装置側に異常はないか**

本体装置の PCI-Express®コネクタを確認し、異物混入や部品破損がないか確認してください。部品破損等ある場合は本製品をお買い求めの販売店または保守サービス会社に連絡してください。

☐ **本体装置の BIOS のバージョンは適切か**

BIOS のバージョンが適切か確認してください。

最新の BIOS で確認してください。



## **ボードを確認してください**

☐ **ボードが破損していないか**

ボードの実装部品が破損していないか確認してください。

破損している場合は本製品をお買い求めの販売店または保守サービス会社に連絡してください。

☐ **ボード実装部品に異物が入り込んでいないか**

ボード上の実装部品に異物が入り込んでいないか確認してください。

混入している場合は本製品をお買い求めの販売店または保守サービス会社に連絡してください。

☐ **ボードのコネクタに異物が付着していないか**

ボードの PCI-Express®コネクタ,補助電源コネクタに異物が付着していないか確認してください

付着している場合は取り除いてください。

以上の項目を確認したにもかかわらず、問題が解決しない場合は、本製品に何らかの故障が発生している可能性が考えられます。本製品をお買い求めの販売店または保守サービス会社までお問い合わせください。

## 5. 運用における注意事項

1. システムあたりの最大搭載枚数は、本体装置及び装置の構成により異なりますので、本体装置のシステム構成ガイドを参照してください。
2. PCI ホットプラグ、スワップ、リムーブはサポートしていません。
3. GPU 電源コネクタには「K410-387(00) グラフィックスカード電源ケーブル(8Pin. B タイプ)」を接続してください。それ以外のケーブルはサポートしていません。

# 6.仕様

## 6.1. 製品仕様

インタフェース	PCI-Express® 3.0 準拠	
データレート	8GT/s x16 レーン (Gen.3)	
コネクタ	PCI-Express® x16 レーン (Gen.3)	
メモリ	32GB (4096bit HBM2)	
NVIDIA CUDA コア	5120 コア	
NVIDIA Tensor コア	640 コア	
外形寸法	266.7mm(L) 111.2mm(W) (ブラケット/リテーナー含まず)	
重量	1260g(ブラケット、リテーナー装着時)	
動作電圧	12V/3.3V	
消費電力	最大	250W
動作環境	動作	温度 10～35℃ 湿度 8～90% ただし結露なきこと
	保管	温度 -40～75℃ 湿度 5～95%

**Keep this Startup Guide at hand for quick reference at any time necessary. Be sure to read this section carefully.**



## Precautions for Use

-Be sure to read this section -

The following includes information necessary for proper and safe operation of the product.

### Safety Indication

Follow the instructions in this Guide for your safety to use this product.

The server contains components with possible danger, hazards that may cause by ignoring warnings, and preventive actions against such hazards.

The words "WARNING" and "CAUTION" are used to indicate the degrees of danger.

These terms are defined as follows:










**Indicates the presence of a hazard that may result in death or serious personal injury if the instruction is ignored.**



**Indicates the presence of a hazard that may cause minor personal injury, including burns, or property damage if the instruction is ignored.**



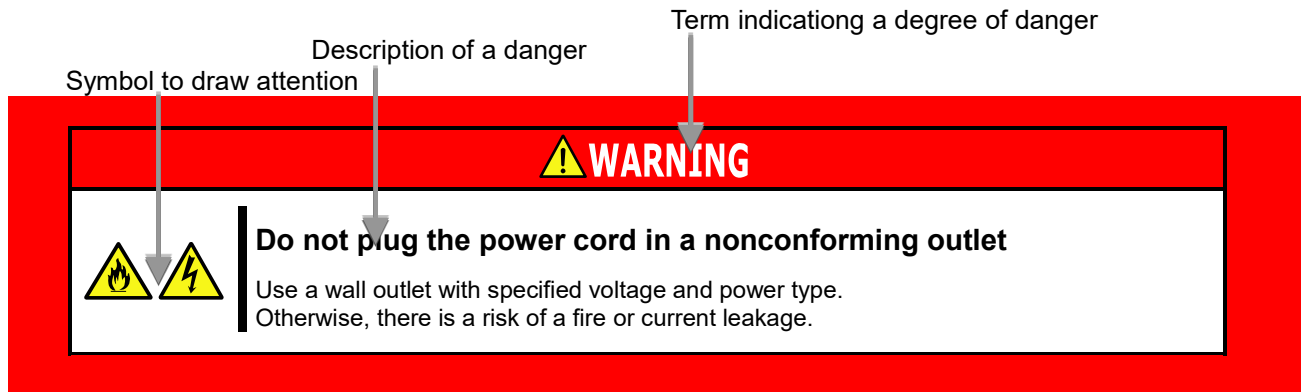

This guide uses the following three types of symbols to give indications and precautions against a danger. They are defined as follows:

	<b>Attention Prohibited action</b>	This symbol indicates the presence of a hazard if the instruction is ignored. An image in the symbol illustrates the hazard type. This symbol indicates prohibited actions. An image in the symbol illustrates a particular prohibited action.	<b>Example</b>  (Electric hazard)
	<b>Mandatory action Attention</b>	This symbol indicates mandatory actions. An image in the symbol illustrates a mandatory action to avoid a particular hazard. This symbol indicates the presence of a hazard if the instruction is ignored. An image in the symbol illustrates the hazard type.	<b>Example</b>  (Do not disassemble)
	<b>Prohibited action</b>	This symbol indicates prohibited actions. An image in the symbol illustrates a particular prohibited action.	<b>Example</b>  (Unplug)






## Symbols Used in This Guide


### Attentions

	Indicates a risk of an electric shock.		Indicates a risk of a fire or fumes.
	Indicates a general precaution or warning that cannot be specifically identified.		Indicates that improper use may cause personal injury.

### Prohibited actions

	Do not disassemble, repair, or modify this product. Otherwise, there is a risk of an electric shock or fire.		Keep the product away from water. Otherwise, there is a risk of an electric shock or ignition.
	Indicates a general prohibited action.		

### Mandatory actions

	Unplug the power cord of the server. Otherwise, there is a risk of an electric shock or fire.
---	---

## Precautions for Safety

This section provides precautions for using this product safely. Read this section carefully to ensure proper and safe use of the server. For symbol meanings, see “Safety Indications”

### General Precautions

#### **WARNING**



**Do not use the product for services where critical high availability may directly affect human lives.**

The product is not intended to be used with or control facilities or devices concerning human lives, including medical devices, nuclear facilities and devices, aeronautics and space devices, transportation facilities and devices; and facilities and devices requiring high reliability. NEC assumes no liability for any accident resulting in personal injury, death, or property damage if the product has been used in the above conditions.



**Do not continue to use the equipment if you detect smoke, odor, or noise**

If the equipment emits smoke, odor, or noise, immediately unplug the power cord of the server. Then, contact your service representative. Continuing to use the product in such condition may cause a fire.



**Do not insert a wire or metal object**

Do not insert a wire or metal object into this product.  
There is a risk of an electric shock.

#### **CAUTION**



**Keep water or foreign matter away from the equipment.**

Do not let any form of liquid (water etc.) or foreign matter (e.g., pins or paper clips) enter the equipment. Failure to follow this warning may cause an electric shock, a fire, or a failure of the equipment. When such things accidentally enter the equipment, immediately turn the power off and unplug the power cord. Then, contact your service representative.

# Precautions for Installation, Relocation, Storage and Connection

## CAUTION



### **Do not use any unauthorized interface cable.**

Use only interface cables authorized by NEC and locate a proper device and connector before connecting a cable. Using an authorized cable or connecting a cable to an improper destination may cause a short circuit, resulting in a fire.

Also, observe the following notes on using and connecting an interface cable.

- Do not use any damaged cable connector.
- Do not step on the cable.
- Do not put any object on the cable.
- Do not use the card with the loose interface cable connection.
- Do not use any damaged cable.



### **Do not use the equipment in the place where corrosive gases exist.**

Make sure not to locate or use the equipment in the place where corrosive gases (sulfur dioxide, hydrogen sulfide, nitrogen dioxide, chlorine, ammonia, ozone, etc) exist. Also, do not set it in the environment where the air (or dust) includes components accelerating corrosion (ex. sulfur, sodium chloride) or conductive metals.

There is a risk of a fire due to corrosion and shorts of an internal printed board.

Contact your service representative for the place appropriate to the equipment.

## Precaution on disposing or transferring



- Follow the ordinances by your local government when you are disposing the product. Contact the local government for more information.
- If you are transferring this product to other people, be sure to transfer all items that come with the product including this guide along with the product.

## Precautions for Handling of Internal Devices

### **WARNING**

**Do not disassemble, repair, or modify the product yourself**

Do not disassemble, repair, or modify this product. Doing so may cause an electrical shock or a fire. Do not put the product close to fire, or immerse it in water. Doing so may cause an explosion. If the product does not function normally, contact your service representative.

**Unplug all power cords**

Turn the power off and unplug the power before removing the computer's cover. Failure to do so could endanger you and may damage the adapter or computer

### **CAUTION**

**Avoid installation in extreme temperature conditions.**

Immediately after the server is powered off, its internal components such as heat sink are very hot. Leave the server until its internal components fully cool down before installing/removing any component.

**Ground yourself to dissipate any static charge before handling the adapter.**

To prevent any damage on components due to static electricity, make sure to discharge static electricity from yourself before you touch this adapter.

**Don't touch uncoated metal parts on adapter.**

Never touch this adapter's terminals or components or uncoated metal parts on adapter. Otherwise, taint, erosion or others may cause loose connection. Do not touch this product with wet or dirty hands.

**Excessive force could break the connector.**

On installing this adapter, do not insert it by force. Otherwise, this adapter and the server may be damaged.

**Don't touch the tip of bracket to other parts of server**

When you insert this adapter into expansion slot, be careful not to touch the tip of bracket to other parts of server (such as other components or board). Otherwise, they may be damaged.

**Firmly connect the cable**

When connecting the cable, insert the cable connector until you hear a click sound.



## Anti-static Measures



### Installing or Uninstalling Internal Optional Devices

- (1) To avoid electric hazard and malfunction of the device, be sure to turn off the Power switch of the server and unplug the power cord from outlet before starting work, except for hot-swappable devices.
- (2) The Optional Devices contains electronic components sensitive to static electricity. Avoid failures caused by static electricity when installing or removing any optional devices. Wear a wrist strap on your wrist and provide earthing before starting work. If no wrist strap is available, discharge static electricity from your body by touching an unpainted metal part of the chassis which is grounded.
- (3) Handling of cables  
When connecting a cable (e.g., LAN cable), static electricity may also be charged due to friction against floor. Connecting a charged cable with an I/O device may cause damage to the device.  
It is recommended to discharge static electricity before connecting a cable by using ionizer or the like. Consult with your sales representative for apparatus to discharge static electricity.

## Introduction

Thank you very much for purchasing our products. To maximize the functionality of this product, please read this guide carefully and follow the instructions for proper handling.

## About this Guide

This guide describes how to handle and use this product properly.  
Keep this guide at hand for your future reference.

## Text Conventions

The following conventions are used throughout this guide. For safety symbols, see “Safety Indications” provided earlier.

<b>IMPORTANT:</b>	Items that are mandatory or require attention when using this product
<b>NOTE:</b>	Helpful and convenient piece of information

# 1. General Description

## 1.1. Overview

This product is GPGPU (General-purpose computing on graphics processing units) dedicated to the Express5800 series.

This product is a PCI-EXPRESS 3.0 compliant GPGPU card equipped with a CUDA core processor of 5120 cores and a Tensor core of 640 cores and 32GB of memory. Card size is full-length full-height, is a two-sheet wide card that occupies two slots.

**IMPORTANT:** | - Do not install this product to a computer that is not recommended by NEC Corporation.

**NOTE:** | Check the PCI-Express® slot which can be attached with reference to User's Guide of Express Server before attaching this product.


## 1.2. Description

The functions of each part are as follows.


- **Bracket**  
A bracket for fixing this product to the server chassis. This product is a full height board with double width brackets attached. The bracket can not be replaced.
- **Retainer**  
It is an extension for securing the PCI EXPRESS card to the internal mechanism of the server chassis. This product becomes a full-length board with the retainer attached. Please use without removing the retainer.
- **GPU Power connector**  
Auxiliary power connector for operation of this product. It is equipped at the rear of this product. Connect the optional "K410-387 (00) Graphics Card Power Cable (8Pin. B Type)".
- **PCI-Express® Connector**  
This product conforms to the PCI-EXPRESS standard.  
If the server's PCIEXPRESS slot has a retention lock, it can be fixed with this product's retention hook.  
The logical lane size and card edge size is listed as follows,

Model	Standard	Card Edge size	Logical Lane size
N8105-55	PCI Express 3.0	x16	x16


### Front View

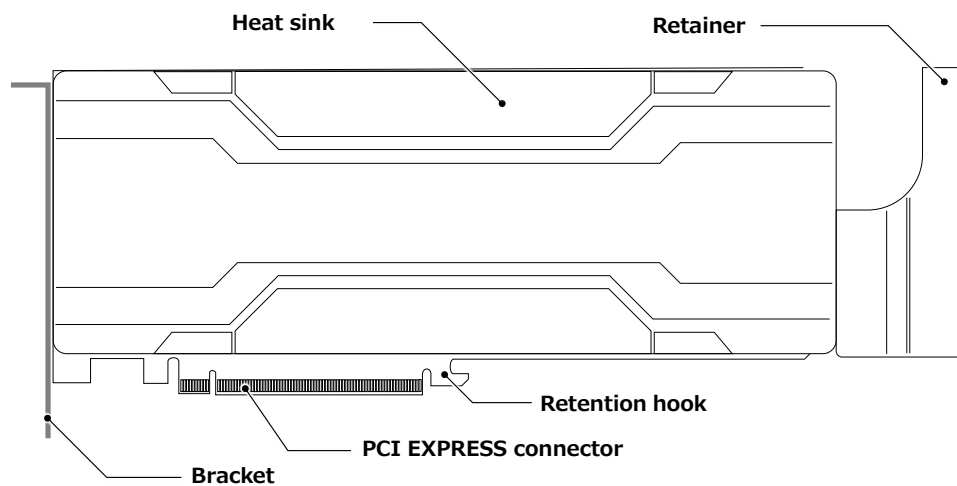

### Rear View

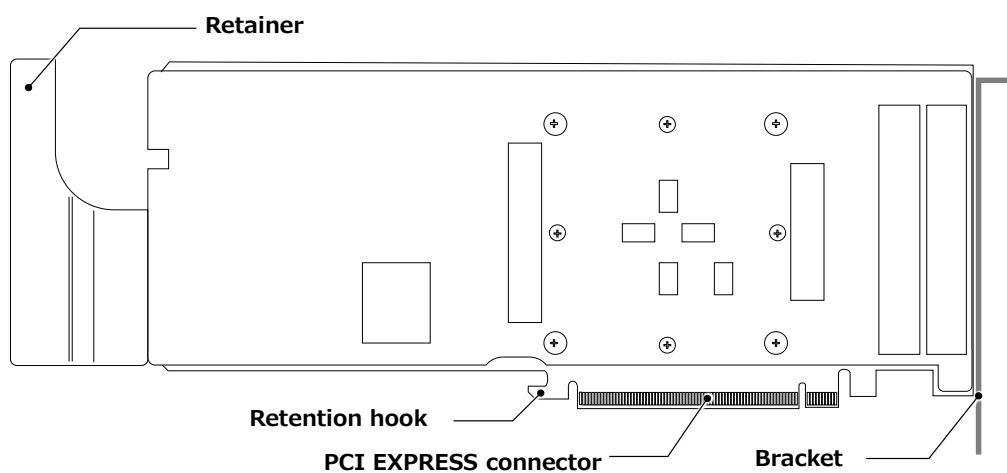

### Bracket View/ Tail View

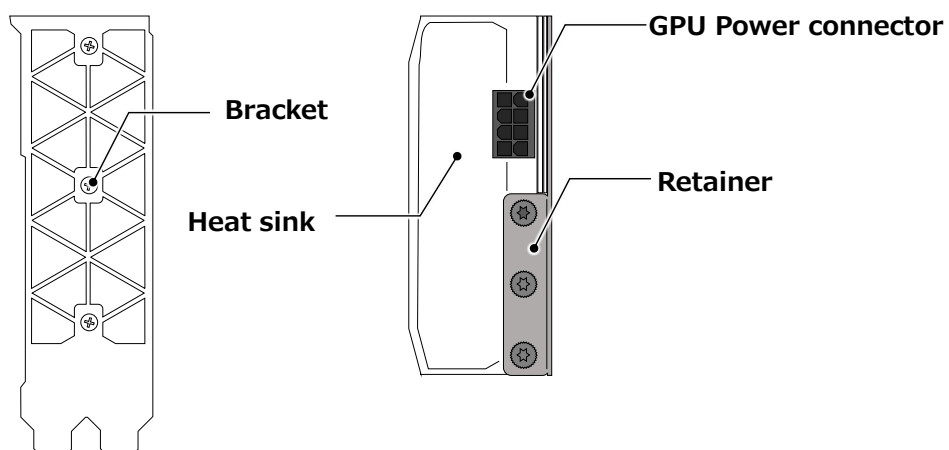

## 2. Hardware Installation/Uninstallation

Refer to the User's Guide of the server for installation and removal of this product and "K410-387 (00) Graphics card power cable (8Pin. B type)" to the server.

### IMPORTANT:

- "K410-387 (00) Graphics Card Power Cable (8Pin. B Type)" is required to install this product.
- Be sure to refer to the user's guide of the server to install and uninstall this product.

## WARNING



### Unplug all power cords

Turn the power off and unplug the power before removing the computer's cover. Failure to do so could endanger you and may damage the adapter or computer

## CAUTION



### Avoid installation in extreme temperature conditions.

Immediately after the server is powered off, its internal components such as heat sink are very hot. Leave the server until its internal components fully cool down before installing/removing any component.



### Ground yourself to dissipate any static charge before handling the adapter.

To prevent any damage on components due to static electricity, make sure to discharge static electricity from yourself before you touch N8105 adapter.



### Don't touch uncoated metal parts on adapter.

Never touch terminals of components or uncoated metal parts on adapter. Otherwise, taint, erosion or others may cause loose connection. Do not touch this product with wet or dirty hands.



### Excessive force could break the connector.

On installing this adapter, do not insert it by force. Otherwise, N8105 adapter and the server may be damaged.



### Don't touch the tip of bracket to other parts of server

When you insert N8105 adapter into expansion slot, be careful not to touch the tip of bracket to other parts of server (such as other components or board). Otherwise, they may be damaged.



### Firmly connect the cable

When connecting the cable, insert the cable connector firmly.

## 3. Driver/Software Setup

The driver software for this product can be downloaded from the NEC support site.

Support site URL:

<http://www.nec.com/express/>


Go to "Support & Downloads" and enter the model number.

In addition, the driver may be released temporarily, so please check the support information on the site and apply it as necessary.


### 3.1. Windows Driver

#### 3.1.1. Installation of GPU computing driver (Display driver)

- 1 After starting the OS Log in using an account with Administrator privileges.  
※ This product may be detected by the PnP function of OS, and the [Found New Hardware Wizard] may be started. In this case, click the Cancel button to exit the wizard.
- 2 Copy the prepared driver to an appropriate folder and extract the ZIP file.  
Right click on the ZIP file and select [Expand All ...].
- 3 Start Explorer.  
Click the Explorer icon in the taskbar.  
Right-click on the Start button and click Explorer.
- 4 Launch the installer by double-clicking [xxx.exe] in the expanded folder in Explorer.  
※ File name of installer varies depending on the version of OS and driver used.
- 5 Driver installation

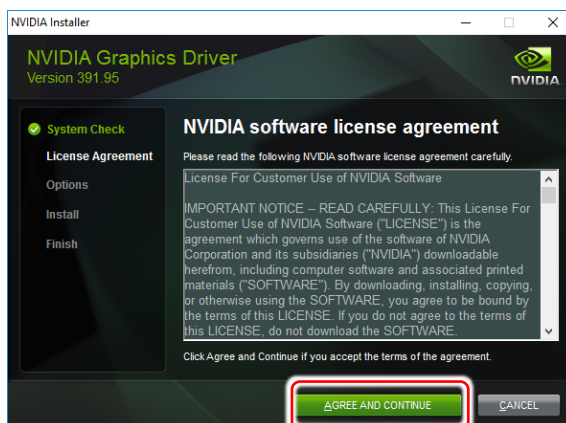


Click the [AGREE AND CONTINUE] button

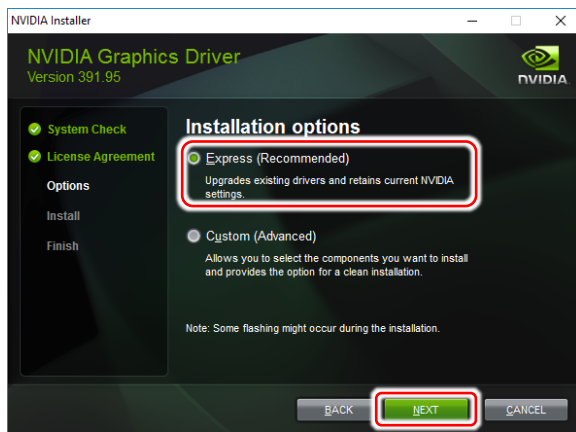

Select the format to install.

Confirm that [Express (Recommended)] is checked and click [NEXT] button

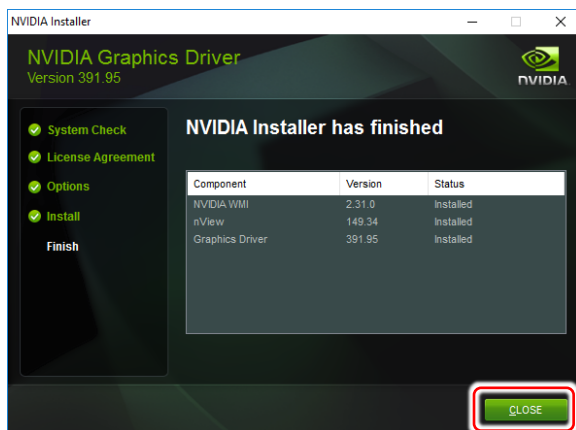

Click the [CLOSE] button to exit the installer.


6

Please reboot the OS after the installer finishes.

### 3.1.2. Uninstall the GPU computing driver (Display driver)

1 After starting the OS Log in using an account with Administrator privileges.


2 Right-click on the start icon, and click Control Panel-> Uninstall a program.  
(If the display method is "large icon" or "small icon", click [Programs and Features].)

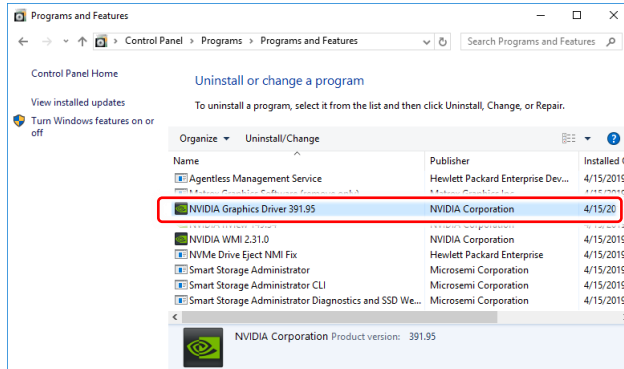


Double-click [NVIDIA Graphics Driver xxx.xx] from the displayed program list to start uninstallation.

※ The driver version corresponding to the OS is displayed.

※ At this time, if you are asked for permission regarding user account control, click [Continue] or [Yes] to continue uninstallation.

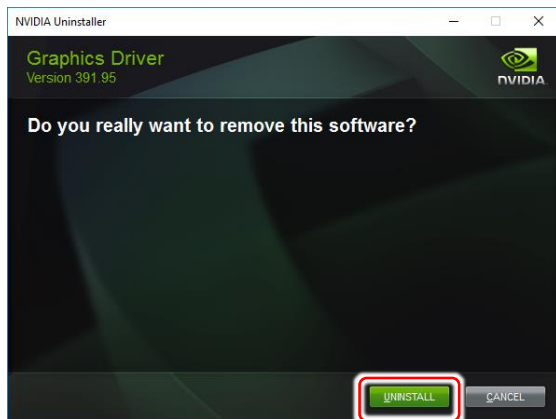

Click the [UNINSTALL] button to continue the uninstallation.

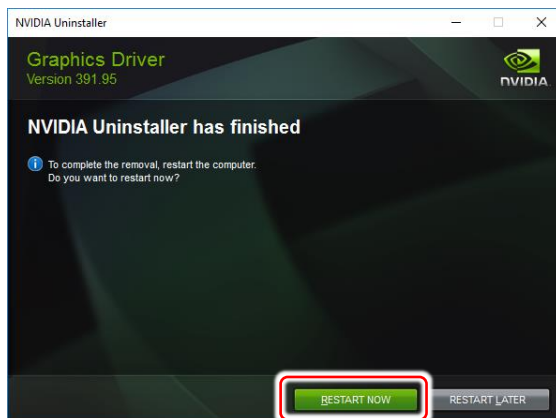

Click the [RESTART NOW] button to restart.

3 You will be asked to reboot after uninstallation.

System restart is required once to reflect the uninstallation, so click [Yes] to restart.



## 3.2. Linux Driver

### 3.2.1. Installation of GPU computing driver (Display driver)

- 1 After starting the OS, log in as a user with root privileges.
- 2 Copy the prepared driver to an appropriate directory and extract the file.
- 3 Add execute permission to the file "xxx.run" after extraction.  
Start the terminal program, move to the directory containing the target file, and execute the following command.

```
# chmod +x xxx.run
```

- 4 If the X-Window System is running, please exit it.  
Start the terminal and execute the following command.

```
# systemctl isolate multi-user.target
```

- 5 Make sure nouveau is loaded.  
Please execute the following command.

```
# lsmod | grep nouveau
```

If nouveau is loaded, proceed to step 6.

※ Depending on your environment, nouveau may not be loaded. In this case, proceed to step 7.

- 6 Disable nouveau.

**NOTE:** In this procedure, a boot image file which does not load the nouveau driver is created. Please check the procedure before execution and carefully execute it in consideration of your environment.

Use the following procedure to create a boot image file that does not load the nouveau driver.

- 1) Create the following file in the following directory, describe the contents and save it.

Directory : /etc/modprobe.d/

Filename : blacklist-nouveau.conf

Descriptions :

```
blacklist nouveau
options nouveau modeset=0
```

- 2) Execute the following command to create a boot image file.

```
# dracut --force
```

※ By executing this command, you can create a boot image file that does not load the nouveau driver at boot time.

(Continued on next page)

3) Please reboot OS.

After rebooting, start the terminal and execute the following command to check that nouveau is not loaded.

```
# lsmod | grep nouveau
```

If the X-Window System is running, exit according to step 4.

## 7

Install the GPU driver.

Execute the file to which the permission for execution permission has been added in step 3.

```
# sh xxx.run
```

You may be asked to select or enter while the installer is running, so please select or enter according to your environment. An execution example is described below for reference.

(Example)

```
Install NVIDIA's 32-bit compatibility libraries?
```

⇒ **Select [Yes]**

```
An incomplete installation of libglvnd was found. All of the essential  
libglvnd libraries are present, but one or more optional components are  
missing. Do you want to install a full copy of libglvnd? This will  
overwrite any existing libglvnd libraries.
```

⇒ **Select [Install and overwrite existing files]**

```
Installation of the kernel module for the NVIDIA Accelerated Graphics  
Driver for Linux-x86_64 (version xxx) is now complete.
```

⇒ **Select [OK]**

## 8

Installation of the GPU Computing driver is complete. Please reboot the OS

### 3.2.2. Uninstall the GPU computing driver (Display driver)

**1** After starting the OS, log in as a user with root privileges.

**2** If the X-Window System is running, please exit it.

**3** Execute the following command to uninstall the GPU driver.

```
# nvidia-installer -uninstall
```

You may be asked to select or enter while the uninstaller is running, so please select or enter according to your environment. An execution example is described below for reference.

(Example)

If you plan to no longer use the NVIDIA driver, you should make sure that no X screens are configured to use the NVIDIA X driver in your X configuration file. If you used nvidia-xconfig to configure X, it may have created a backup of your original configuration. Would you like to run 'nvidia-xconfig --restore-original-backup' to attempt restoration of the original X configuration file?

⇒ **Select [NO]**

Uninstallation of existing driver: NVIDIA Accelerated Graphics Driver for Linux-x86\_64(xxx) is complete.

⇒ **Type [OK]**

**4** Uninstalling the GPU driver is complete. Please reboot the OS.

## 4. Trouble Shooting

### 4.1. Unable to Start the System

#### Check the adapter installation

- ☐ **Make sure the adapter is mounted proper slot**  
Check the slot is conformed to mount the adapter. Refer to the User's Guide of the server.  
If the adapter in not seat proper slot, Seat the adapter to proper slot.
- ☐ **Make sure the adapter is connected to PCI-Express® slot firmly**  
Check the adapter is connected firmly. If it is not so , Re-install the adapter  
Check the screw(or clip) on the server for bracket fixing is not loose
- ☐ **Make sure that the auxiliary power connector is connected**  
This product requires power from the PCI-Express® connector and power from the main unit through the auxiliary power connector. Refer to the system configuration guide of the server, etc., and confirm that it is installed in the installable slot of this product.  
Make sure that "K410-387 (00) Graphics card power cable (8Pin. B type)" is connected.
- ☐ **Make sure equipments on the Server has no failures.**  
Make sure that the PCI-Express® slot does not broke, or foreign substance has not entered.  
If it is so, Please contact to reseller, sales agents or service representative
- ☐ **Verify that your server is using the Latest BIOS**  
Check the version of the system BIOS.  
If the version is not proper, Update the system BIOS to latest version.

#### Check the adapter

- ☐ **Make sure the adapter is not broken**  
Check the component on the adapter.  
If it has broken, Please contact to reseller, sales agents or service representative
- ☐ **Make sure the adapter has not entered foreign substance**  
Check the component on the adapter.  
If it has foreign substance, Please contact to reseller, sales agents or service representative
- ☐ **Make sure a foreign substance has adhered to the connector of a board.**  
Check the PCI-Express® connector on the adapter.  
If a foreign substance has adhered to the PCI-Express® connector, wipe off with soft cloth etc.

**If the problem persists even after you checked the above items, something may be wrong with this adapter.**

**Please contact to reseller, sales agents or service representative.**

#### **EU Contact:**

NEC Nederland B.V.

Olympia 4, 1213 NT Hilversum, The Netherlands

## 5. Notes in operation

1. Maximum mounting number of this product depends on type of the server.  
Please refer to the system configuration guide of the server.
2. PCI hot-plug, hot-add, hot-remove and hot-swap is not supported.
3. Connect the “K410-387 (00) graphics card power cable (8Pin. B type)” to the GPU power connector. Other cables are not supported.

## 6. Specification

### 6.1. General Specification

<b>Interface</b>	PCI-Express® 3.0 compliant	
<b>Data Rate</b>	8GT/s x16 lanes (Gen.3)	
<b>Connector</b>	PCI-Express® x16 lane (Gen.3)	
<b>Memory</b>	32GB (4096bit HBM2)	
<b>NVIDIA CUDA core</b>	5120 cores	
<b>NVIDIA Tensor core</b>	640 cores	
<b>Dimensions</b>	266.7mm(L) 111.2mm(W) (w/o Bracket and Retainer)	
<b>Weight</b>	1260g(w/ Bracket and Retainer)	
<b>Supply Voltage</b>	12V/3.3V	
<b>Power Consumption</b>	Max.	250W
<b>Environment</b>	Operating	Temp. 10 to 35 C Humid. 8 to 90% RH (non-condensing)
	Storage	Temp. -40 to 75 C Humid. 5 to 95%



---

N8105-55 GPU コンピューティングカード (Tesla V100)

**GPU Computing Card (Tesla V100)**

---

## ユーザーズガイド/User's Guide

2019 年 7 月 初版

1st. Edition / July 2019

---

### 日本電気株式会社

東京都 港区 芝 5 丁目 7 番 1 号  
TEL (03)3454-1111(大代表)

### NEC Corporation

7-1 Shiba 5-Chome, Minato-Ku  
Tokyo 108-8001, Japan



\*CBZ-033514-055-00K\*